


XVline

Step 1: Attach curved columns to base using x2 screws.



Step 2: Attached shelf support to columns using CBXs; attach shelf using x2 shelf knobs.

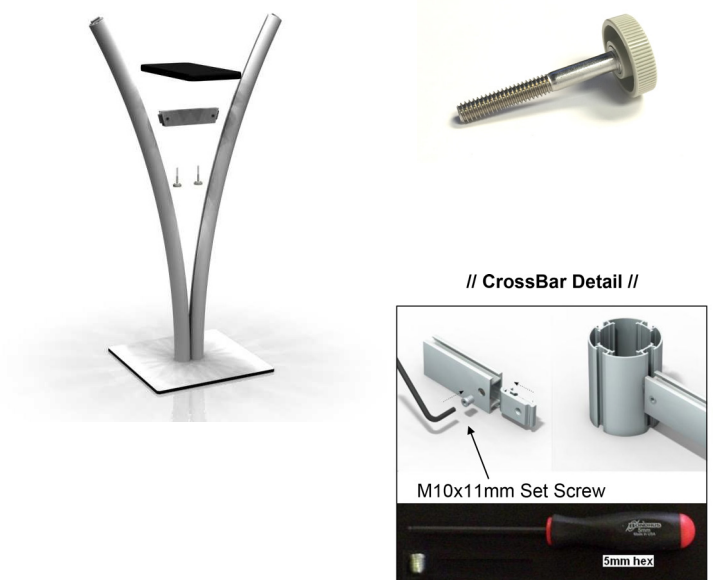

Step 3: Attach ipad mounts to columns.



Step 2: Attach OPTIONAL velcro panel. Complete.

