


Step 1. Assemble 2-piece columns.

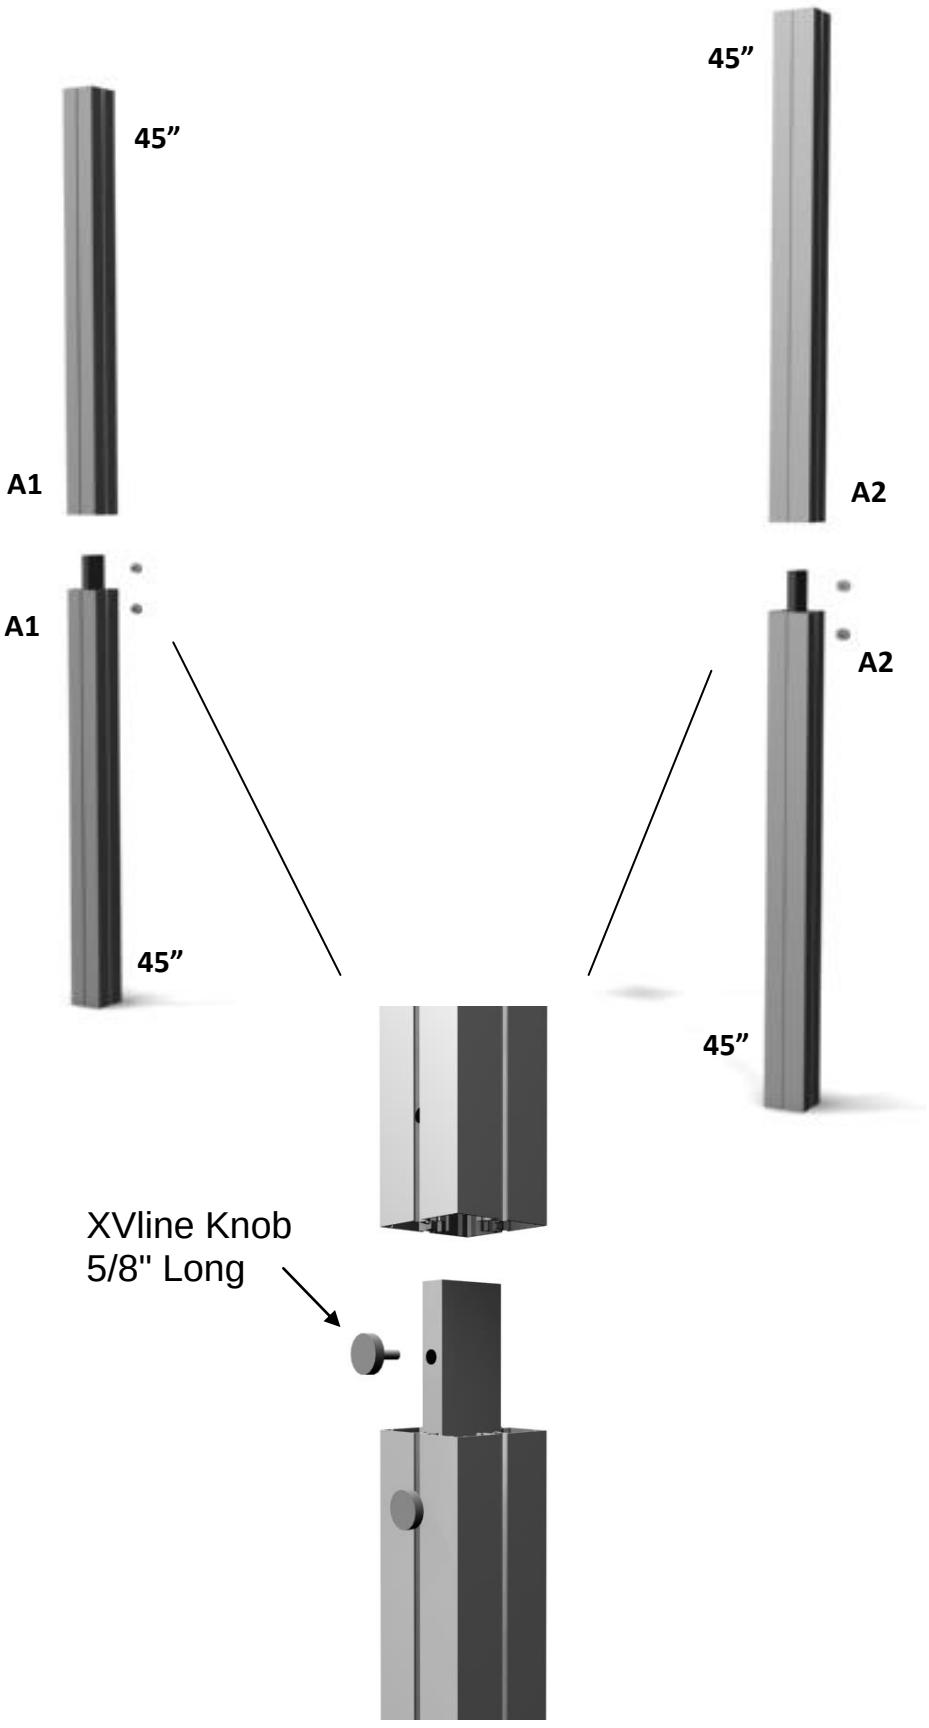


Step 2. Assemble 2-piece graphic bars. Attach to columns.

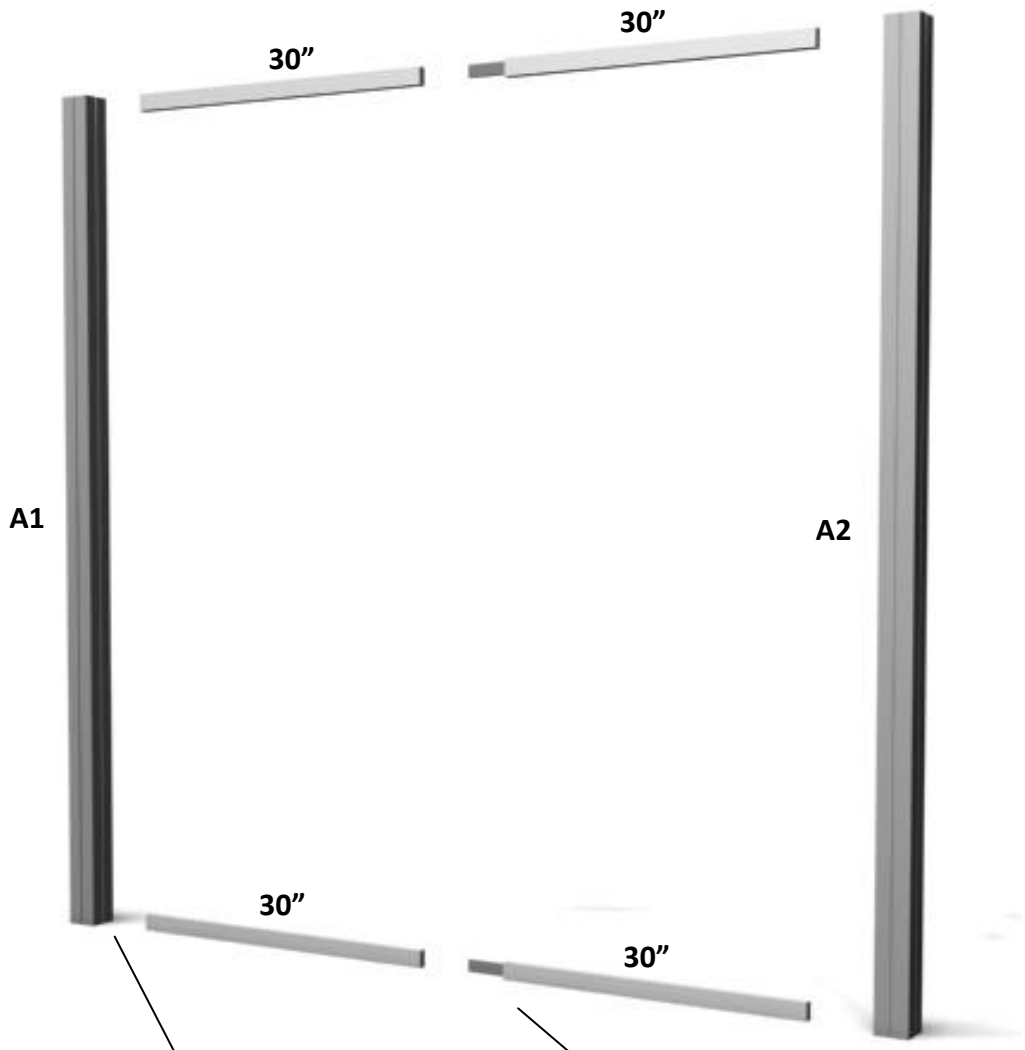

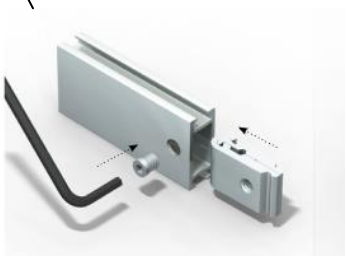


M10x11mm Set Screw



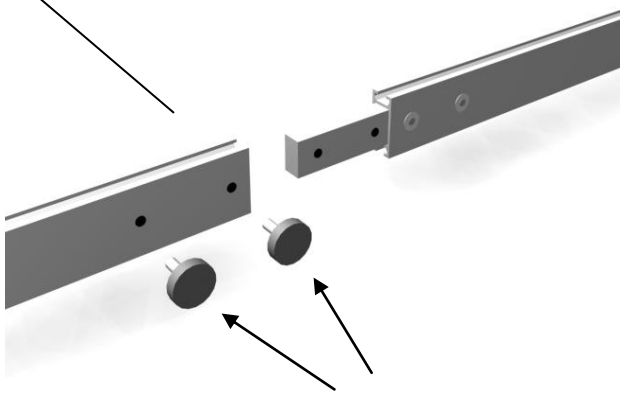

XVline Knob
5/8" Long

Step 3. Assemble 2-piece columns.

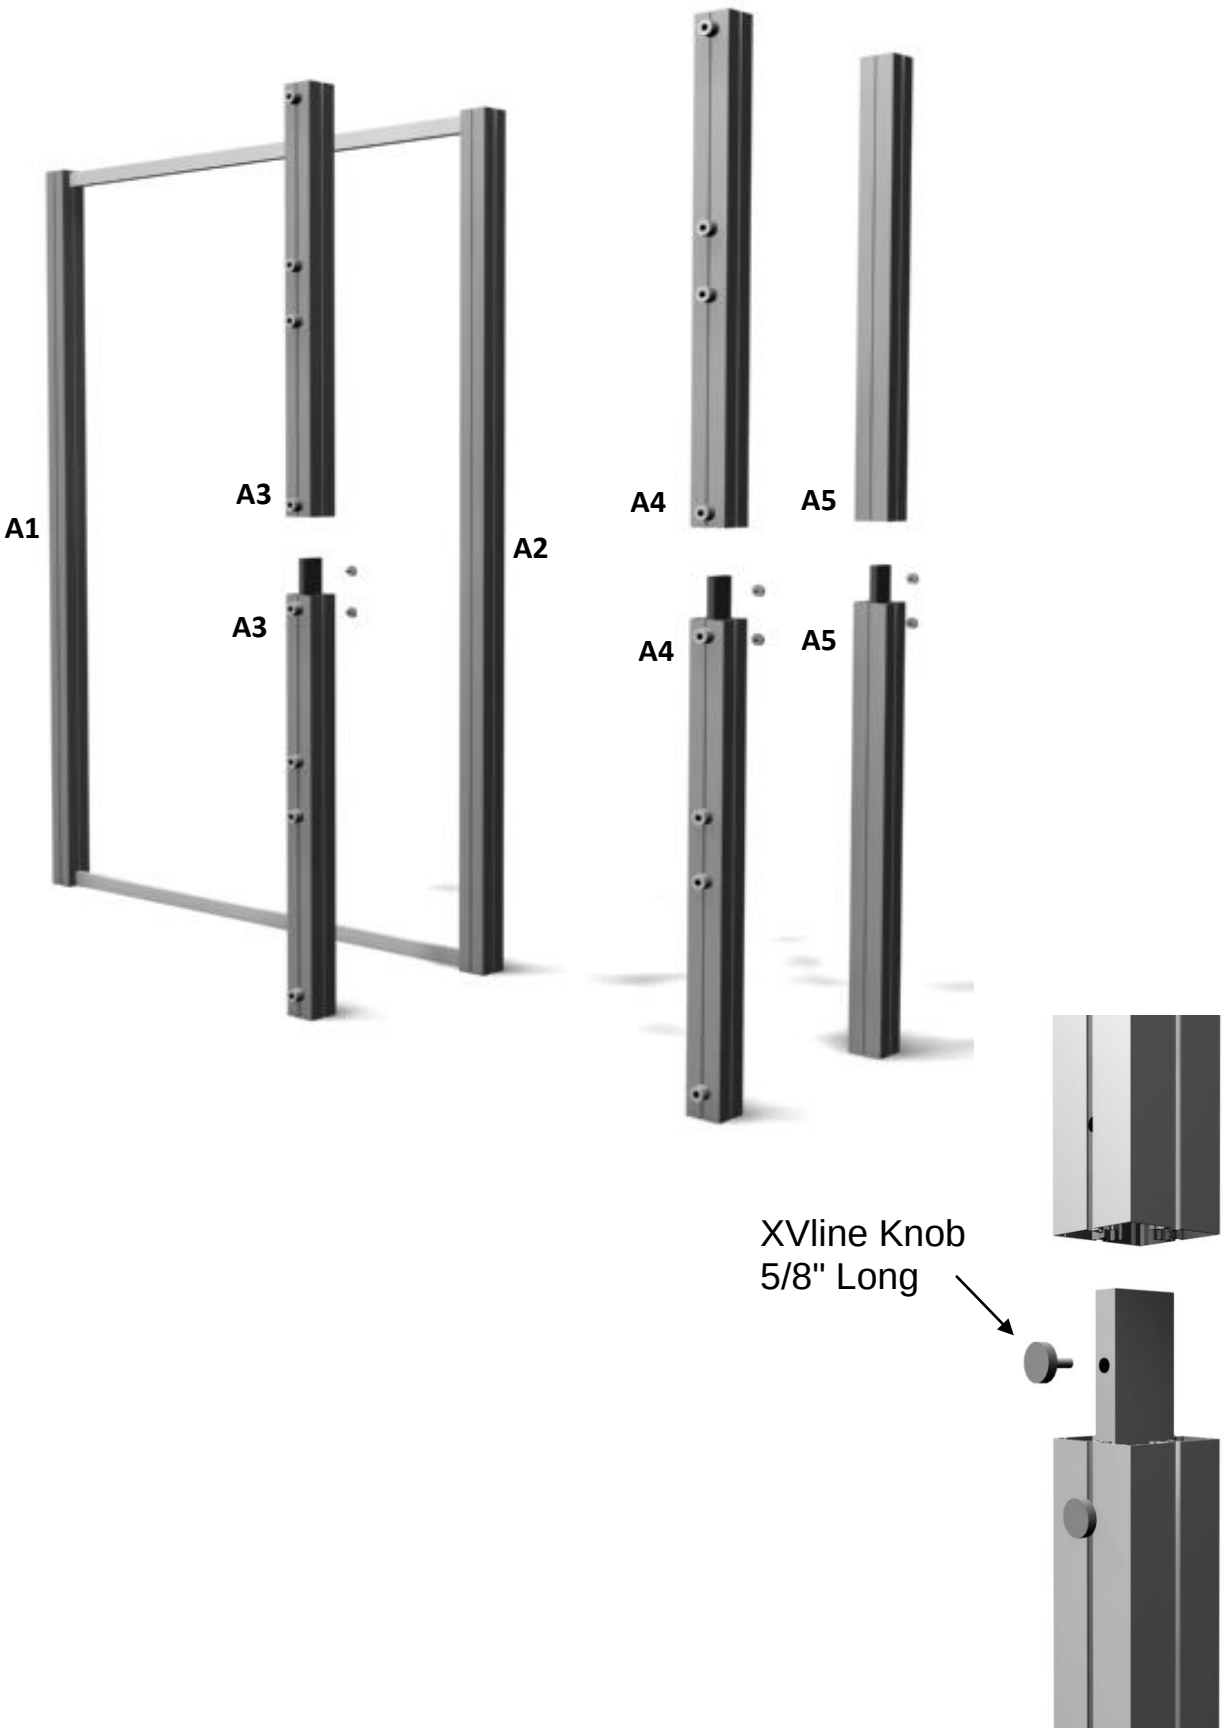

Step 4. Attach side cross bars to columns, insert side panels.




M10x11mm Set Screw



Step 5. Attach front cross bars to columns.



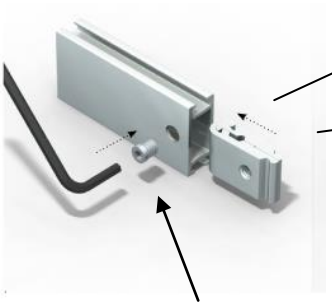


M10x11mm Set Screw





Step 6. Attach standoff panels using standoff caps.




// SEG Graphic Insertion //

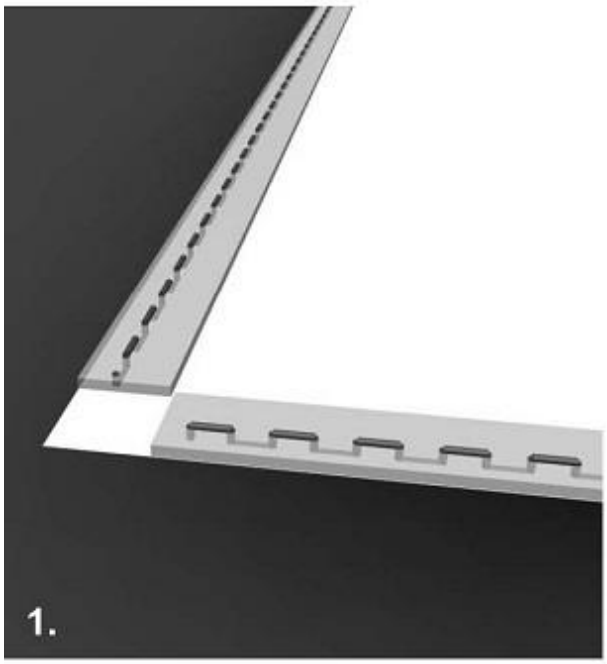

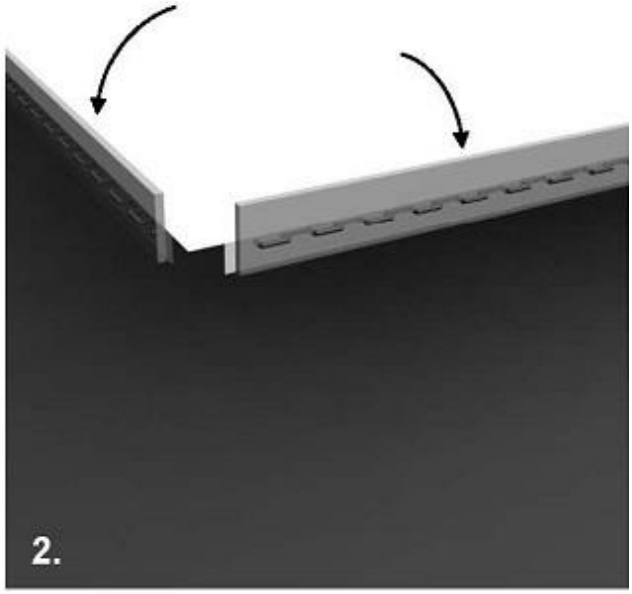

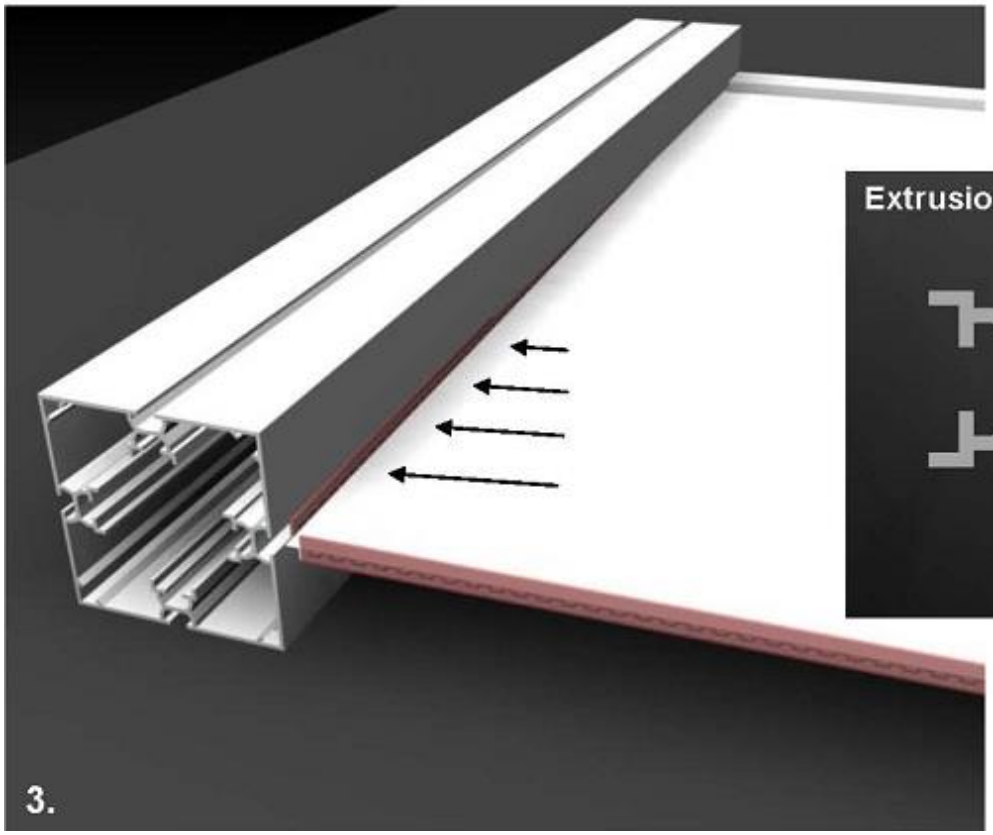

// Detail //

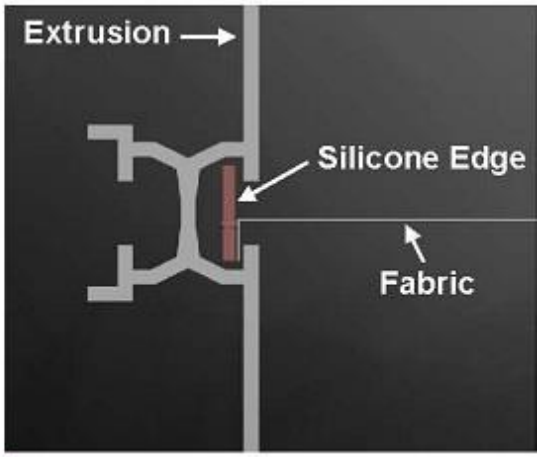

Step 7. Attach fabric graphic.



Step 8. Attach stem lights.




TECHNOLOGIES
Reliable. Flexible. Scalable.
• Blended Bandwidth across multiple tier 1 provid
• 24x7x365 Monitoring & Management
• Helping Remote Hands
• Half and Full Rack
• SAS 70