



Step 1. Attach curved columns to base using 4 screws.



Step 2. Attach columns support cross bars. (**They stack note lengths**)

// CrossBar Detail //

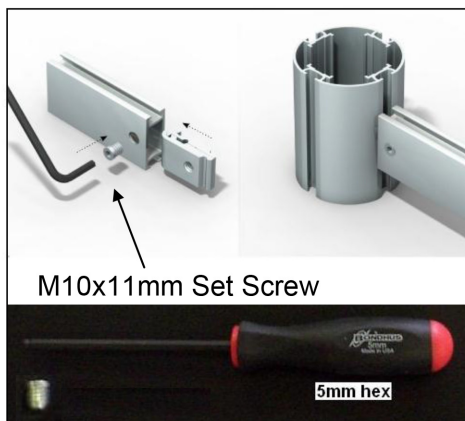


XVline

Step 3. Attach ipad mounts to columns.



// CrossBar Detail //

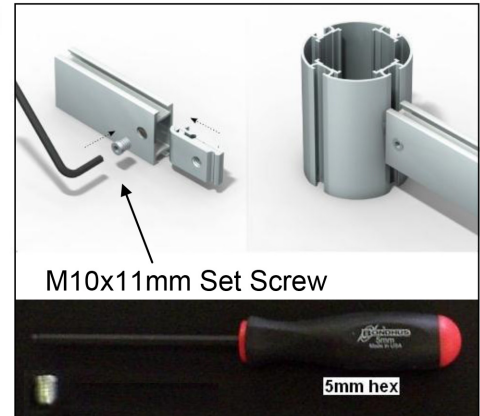

Step 4. Complete.

