



Parts List

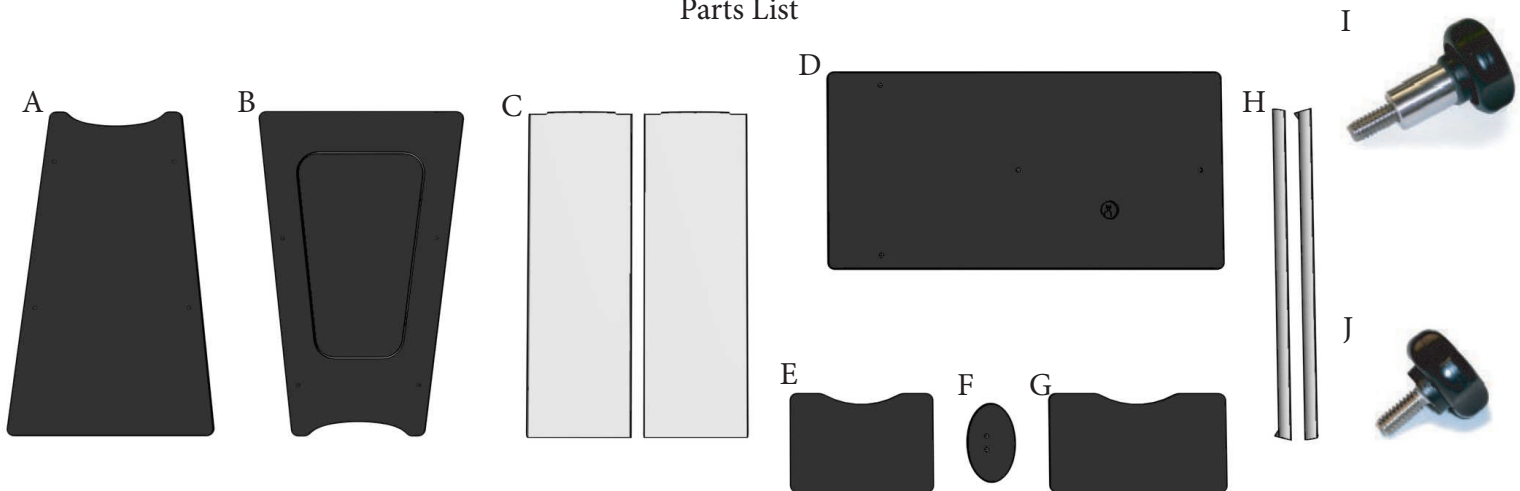

Step 1. Lay back(B) down attach left&right(C) dibond side using x2 Short Knobs(I) each.


Step 2. Tilt cabinet up; open door; attach front(A) to dibond sides using x4 Short knobs(I).

Step 3. Drop shelves(E&G) onto knobs.

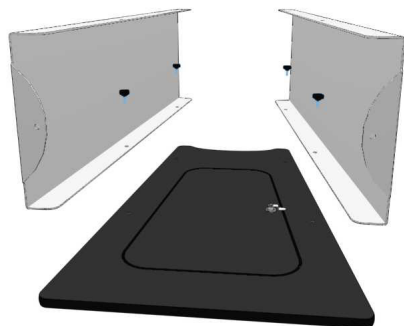

Step 4. Attach left&right counter legs(H) to bottom side of top(D) using x2 Long Knobs(J); attach legs to counter bottom using x2 Long Knobs(J).

Step 5. Flip over counter top(D); With door open attach top to dibond using x2 Short Knobs(I).

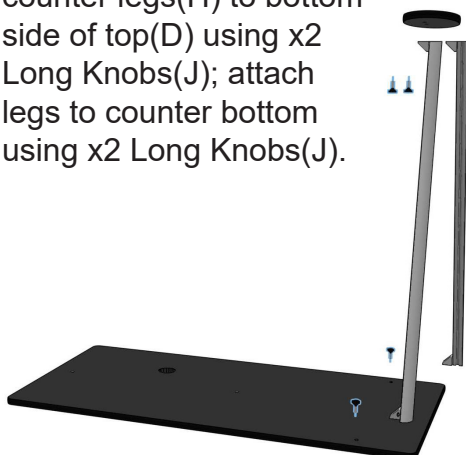

Complete

