

visionary DESIGNS™ © 2016

Order #XXXXX - TF-513 Aero 10'x10' Modified

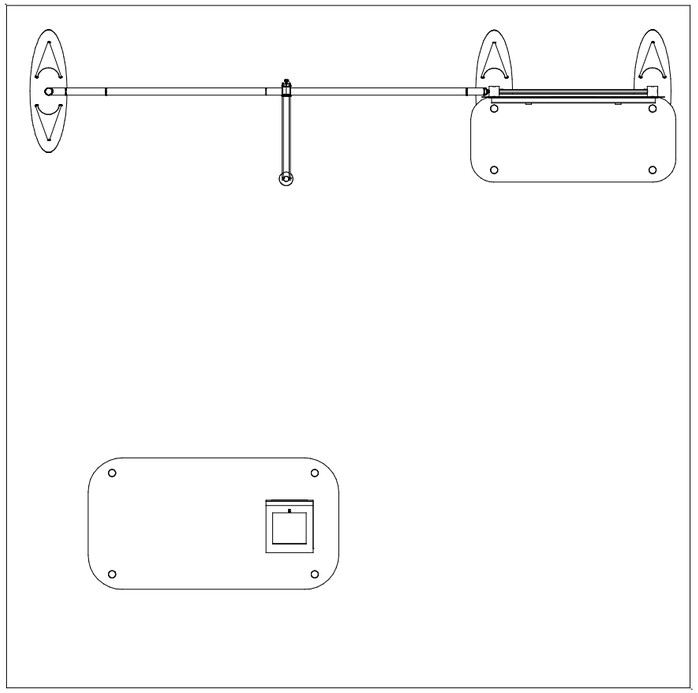

Plan View 10'

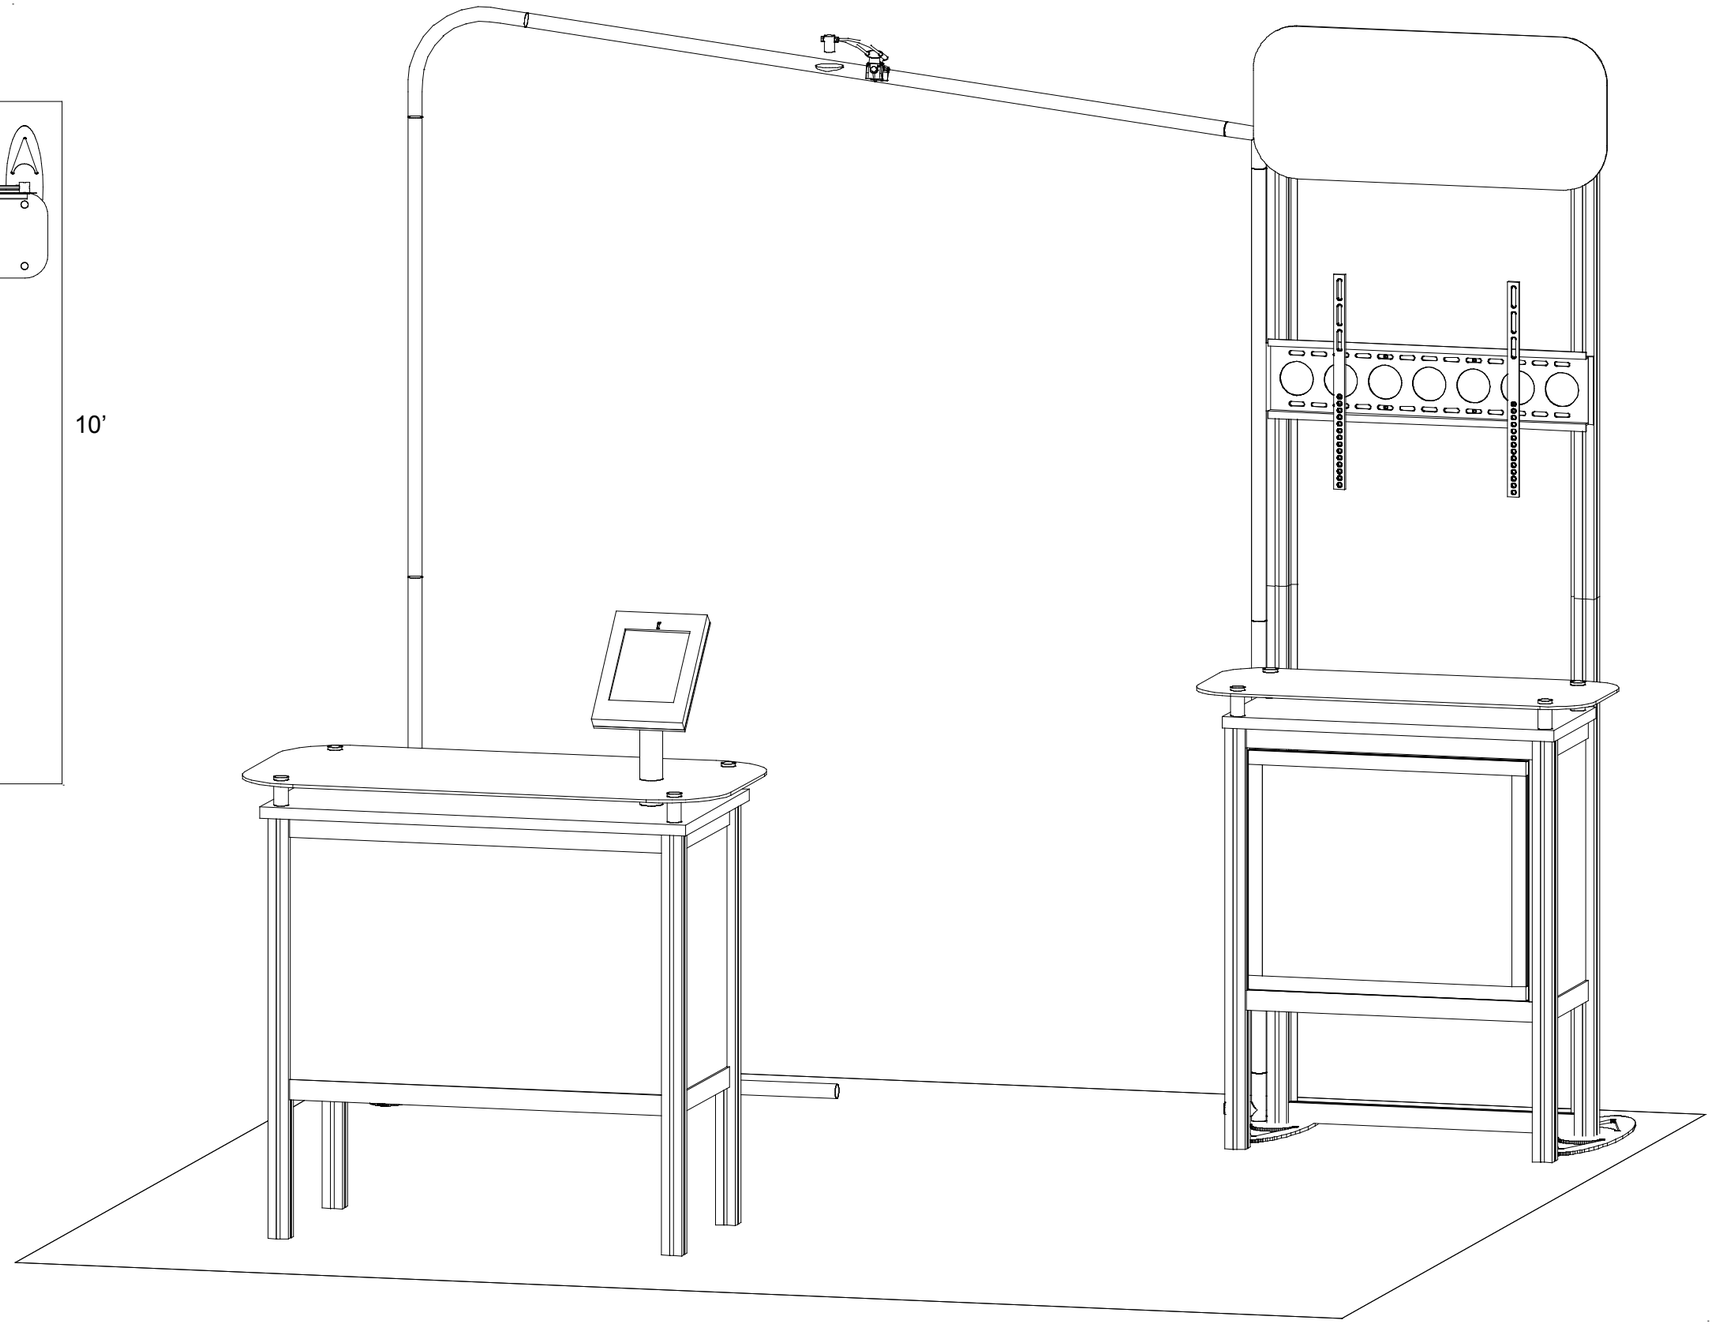

SETUP INSTRUCTIONS

If you would like to tell us about your experience with your setup instructions please email us at **info@classicexhibits.com**

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.

- The setup instructions are created specifically for this configuration.

- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.

- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.


- Retain all provided Packing Materials.
All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

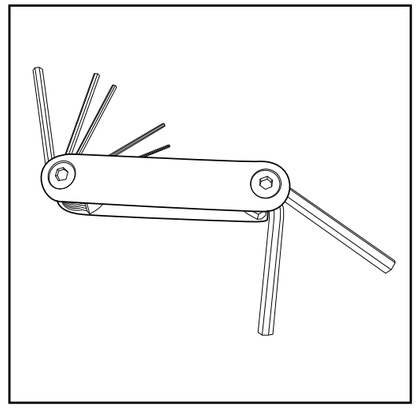


Hex Tool - Essential for Assembly

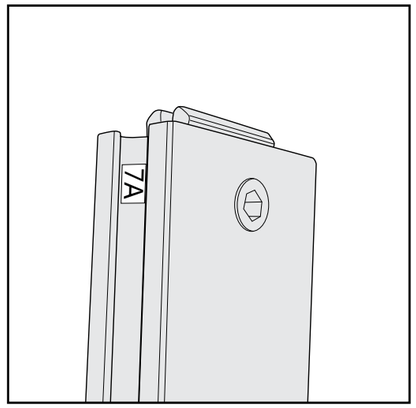


Part Identification - Numbering

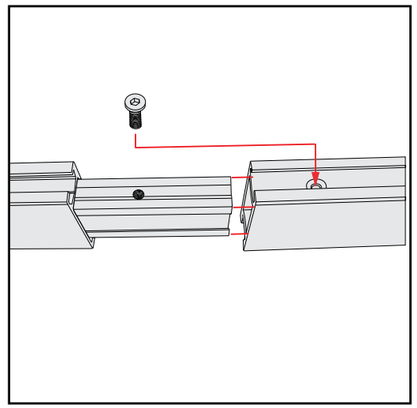


Spline Connection

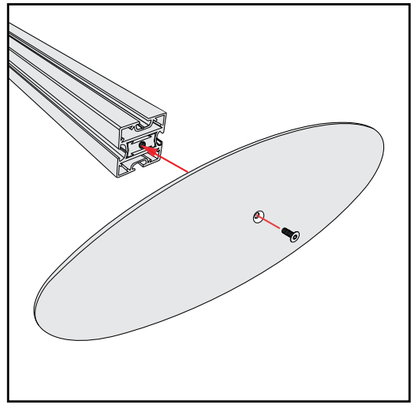

Base Plate & Extrusion Connection

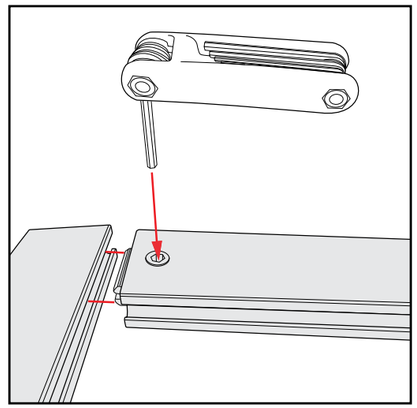

Extrusion & Lock Connection

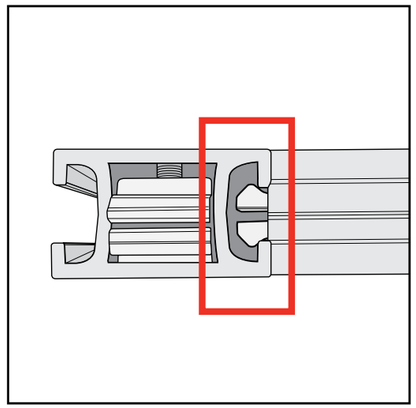


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

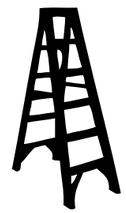

LADDERS OR LIFTS MAY BE REQUIRED



ALL CONNECTIONS MUST BE TIGHTLY SECURED


SEG Graphic Installation

1) Locate channels along the edges of extrusions


2) Insert graphic corners first into channels then center point of graphic into channels. Allows for proportional fit around the perimeter of the extrusion.

3) Working from center to corner, slide silicon edge on graphic into channel.

4) After all edges of graphic have been inserted into channels, step back and assess graphic fit, make adjustments where needed.

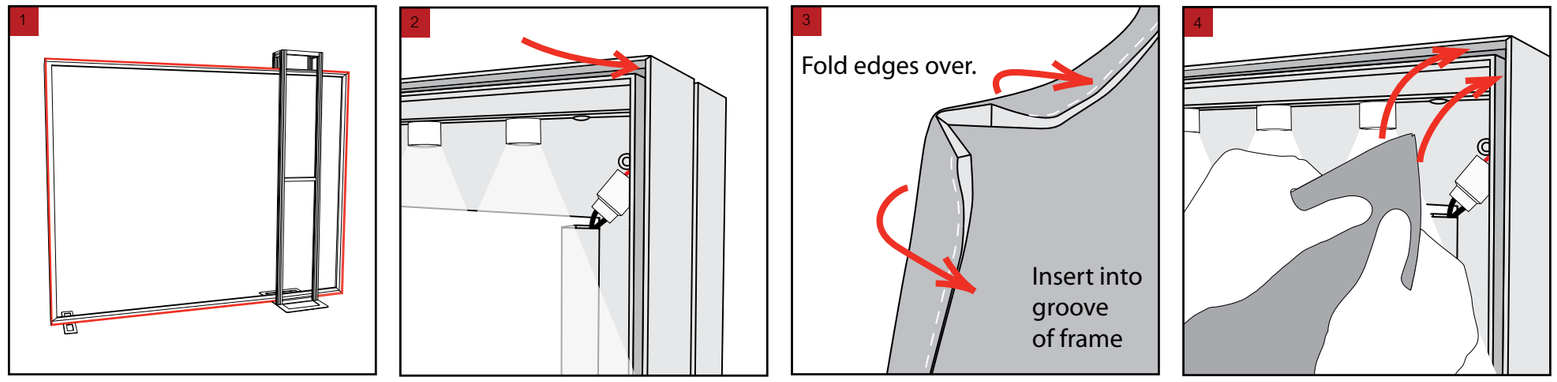


Top View of Each Level

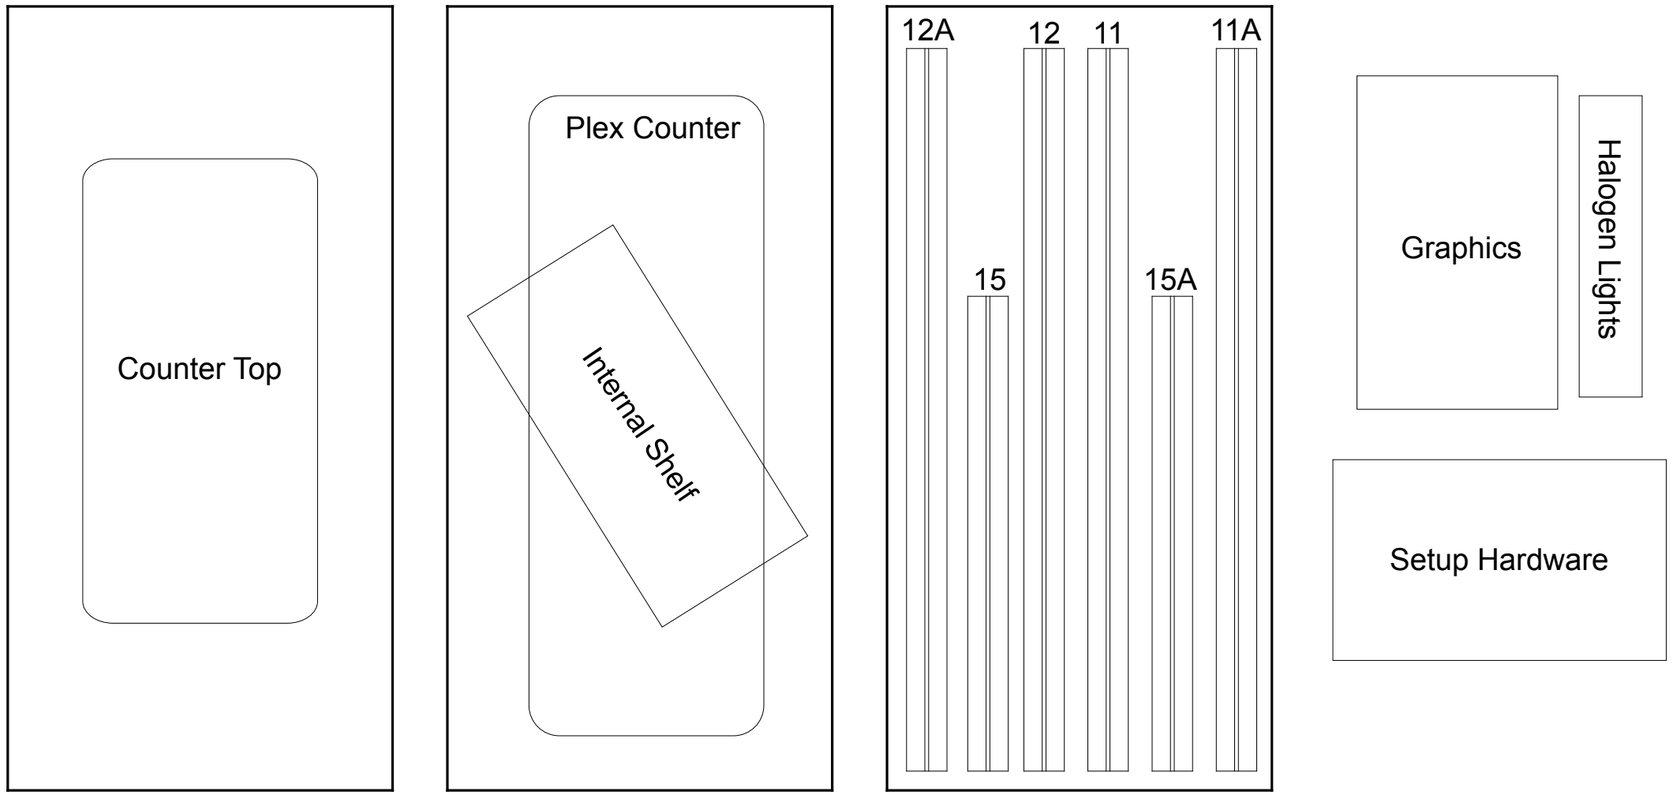

Level 1 Level 2 Level 3

Top View of Each Level

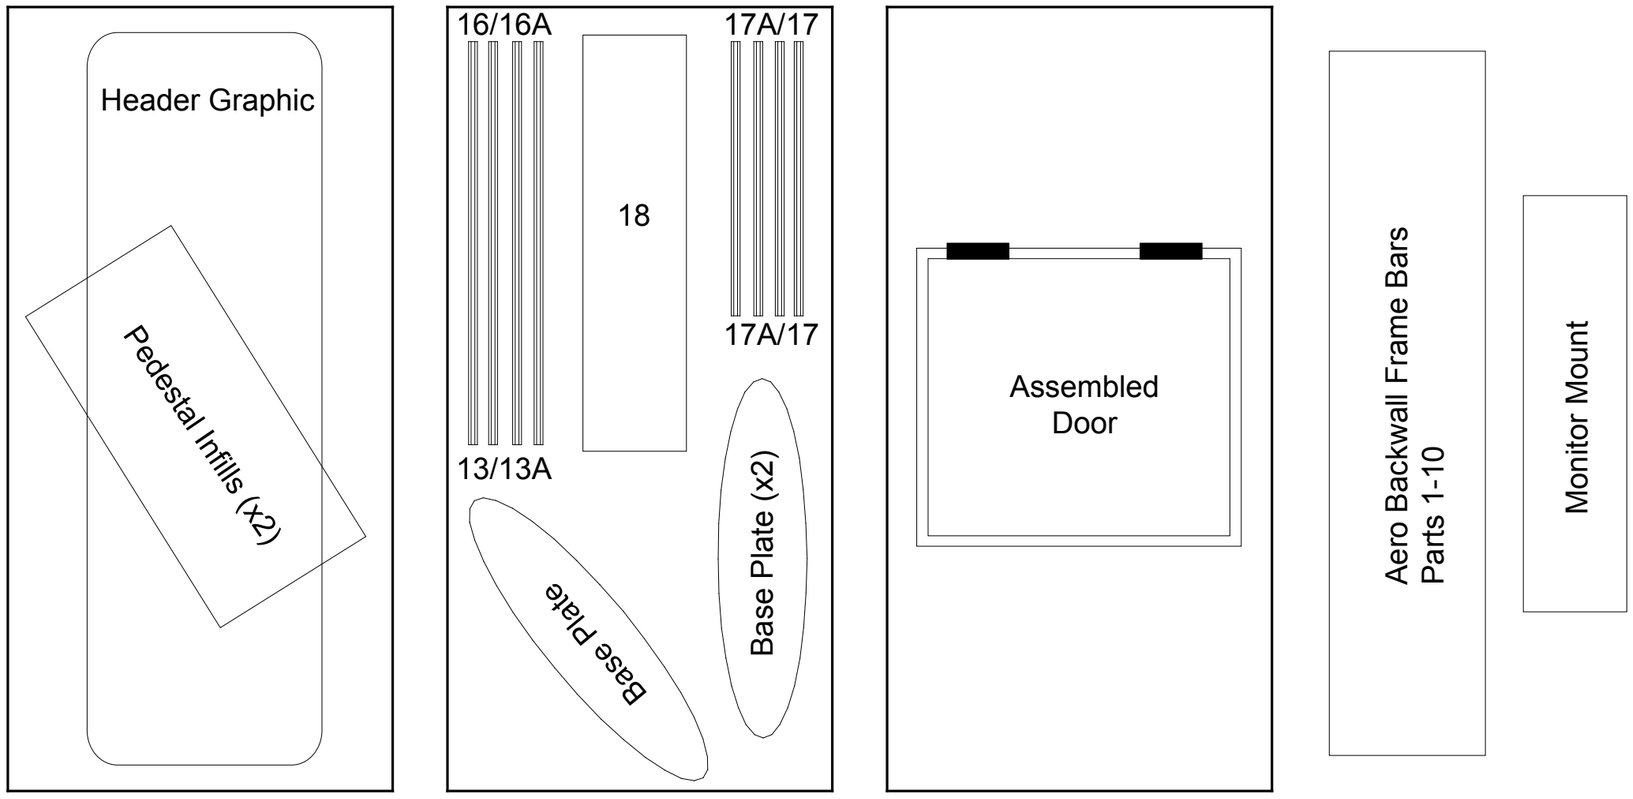

Level 1 Level 2 Level 3

AERO


Using Your Setup Instructions

The Aero Overhead Sign Setup Instructions are created specifically for your configuration. They include an exploded view of the frame which is sequentially numbered. We encourage you to study the instructions before attempting to assemble your exhibit.


Connections are kept very simple: no tools. Everything assembles with push-button connectors and pre-connected horizontal sections.


Cleaning and Packing Your Display

1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

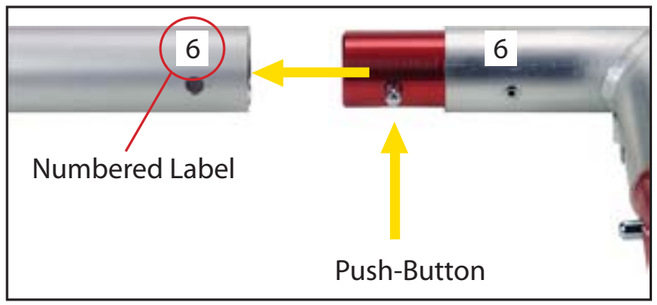

Connections are made by holding the button down and sliding the red tube into opposing tube until the connection is made. To disassemble push button and pull or twist extrusions apart.

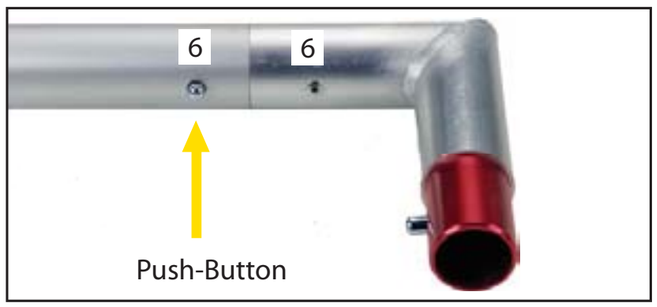


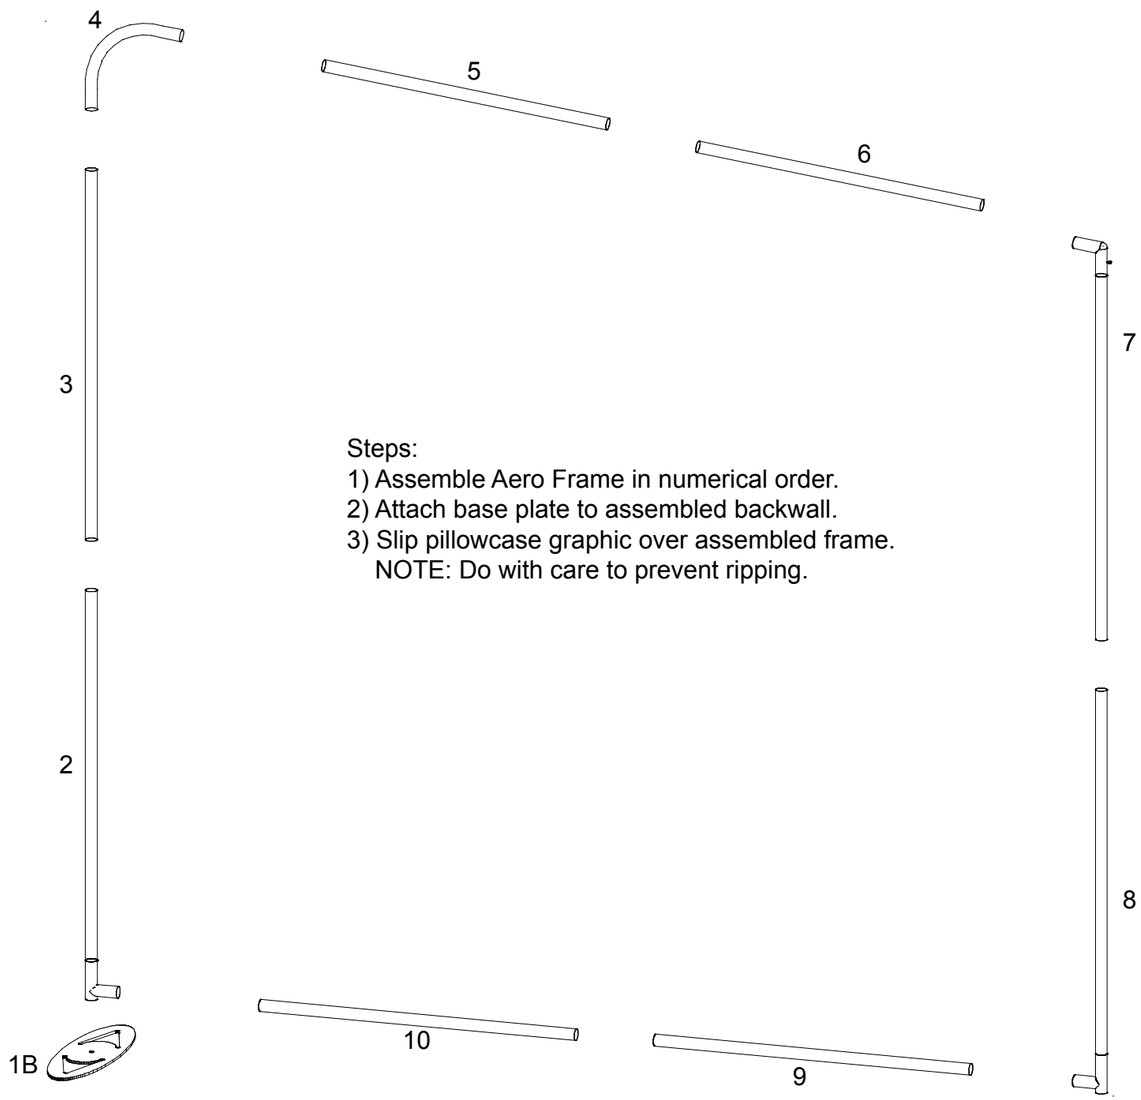



Steps:
1) Assemble Aero Frame in numerical order.
2) Attach base plate to assembled backwall.
3) Slip pillowcase graphic over assembled frame.
   NOTE: Do with care to prevent ripping.

Item	Qty.	Description
1/1A	2	Base Plate
11/11A	1/1	47.5"h S44 Vertical Extrusion
12/12A	1/1	47.5"h S44 Vertical Extrusion
13/13A	1/1	26"w Z45 Horizontal Extrusion

Steps:
1) Connect verticals [11] & [11A] together. See S44 Connector detail. Repeat step for assembling verticals [12] & [12A].
2) Attach base plate [1] to the bottom of vertical [12/12A].
3) Connect horizontals [13] & [13A] between veritcal assembies [11/11A] & [12/12A].
4) Attach assembled Aero Frame (with pillowcase graphic installed) to key hole located in [11A].
See Aero Frame to Vertical Extrusion Attachment detail.

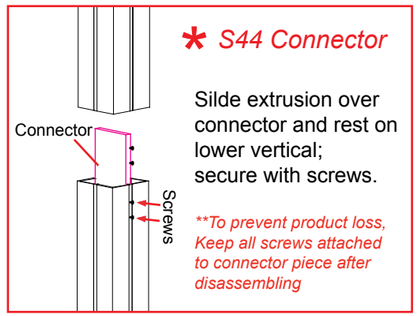


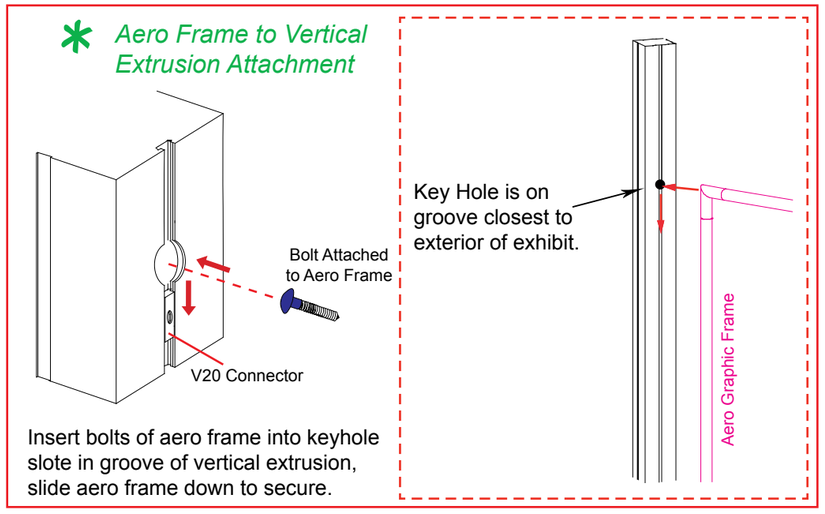


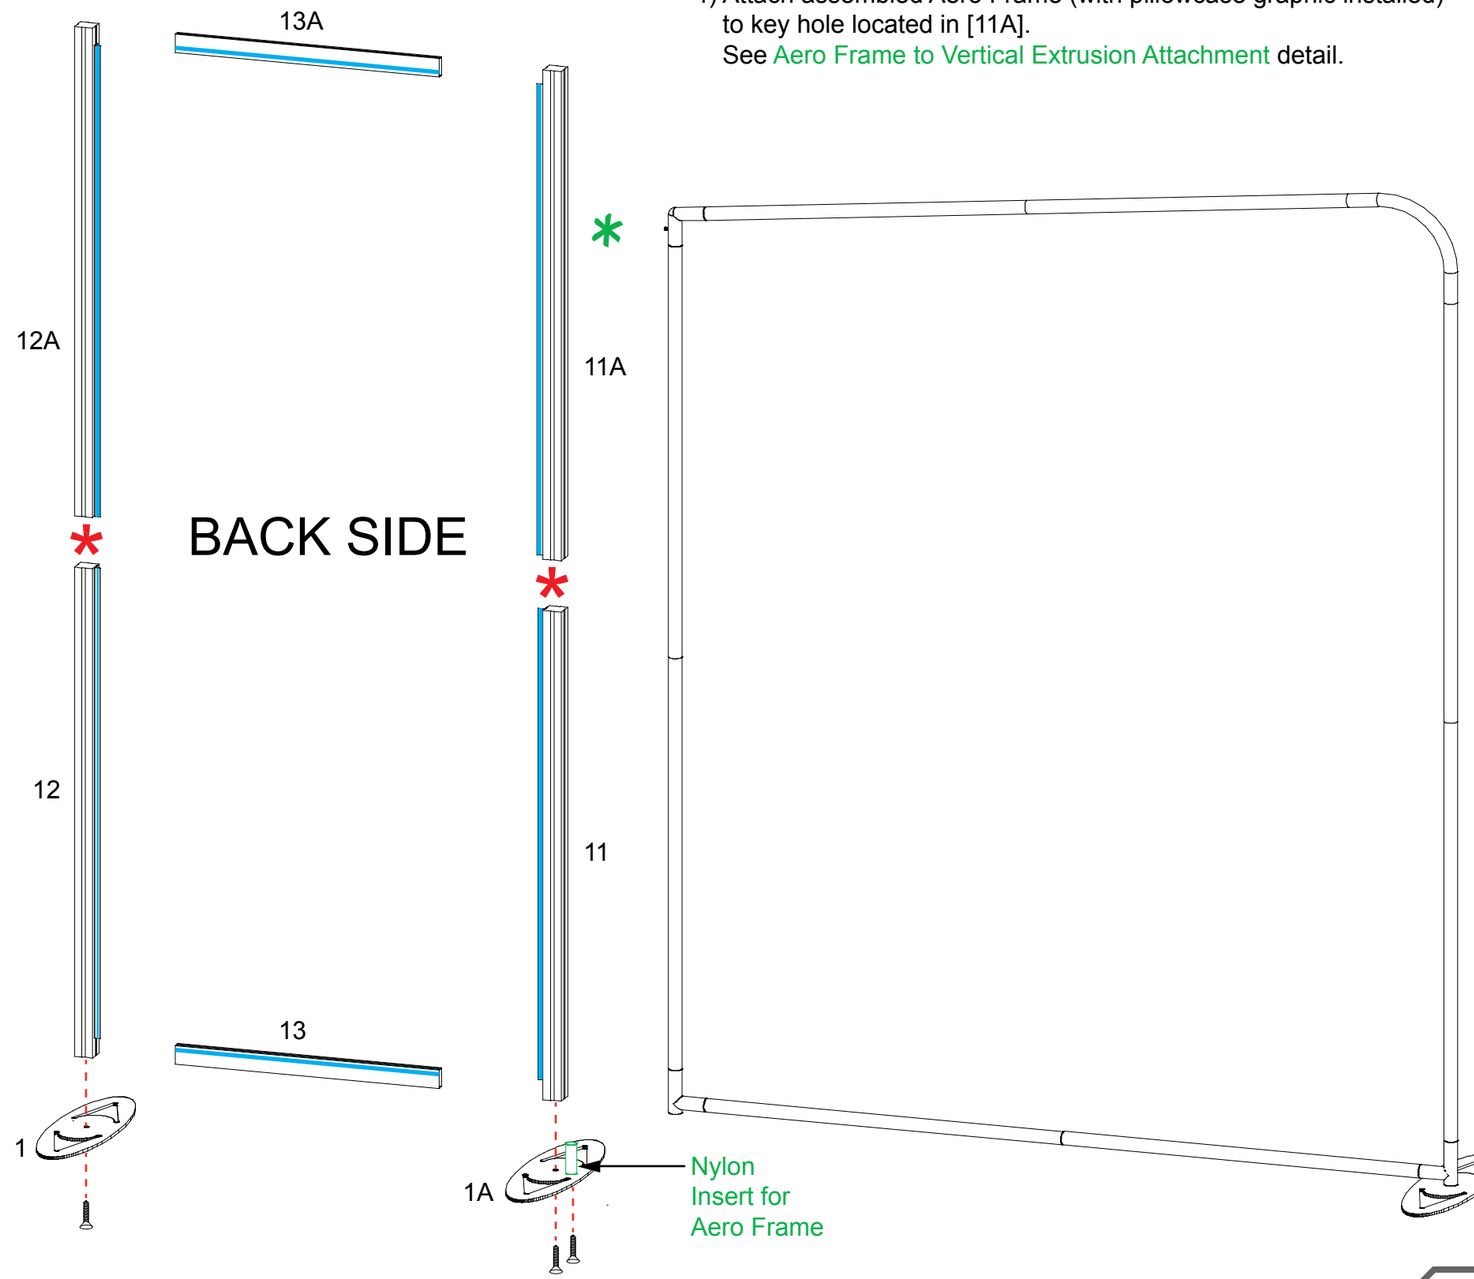

Order #XXXXX - Backwall Workstation Assembly


Item	Qty.	Description
14	1	37.25”h S44 Vertical Extrusion w/ Door Stop
15	1	37.25”h S44 Vertical Extrusion w/ Door Hinges
16/16A	1/1	26”w Horizontal Extrusion
17/17A	2/2	12”w Horizontal Extrusion
18	1	29.622”w Mounting Plate

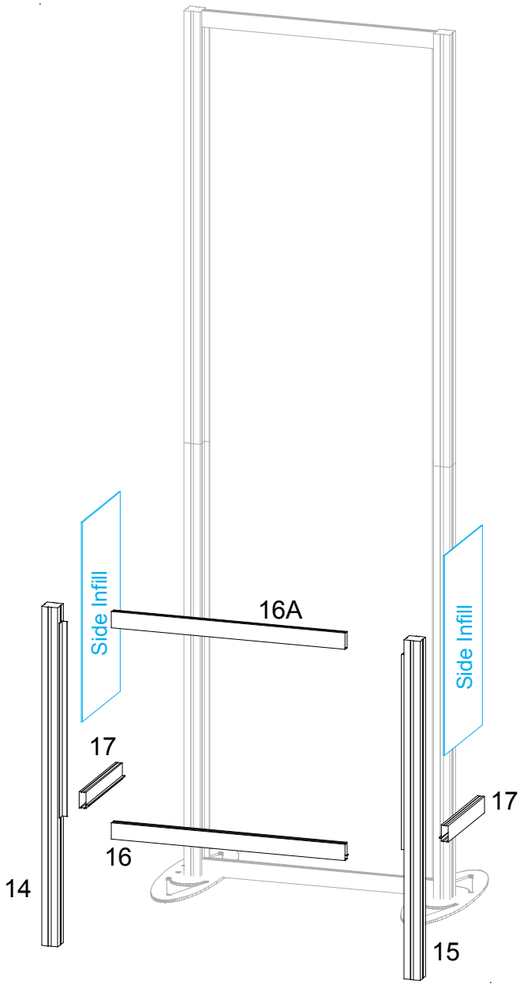

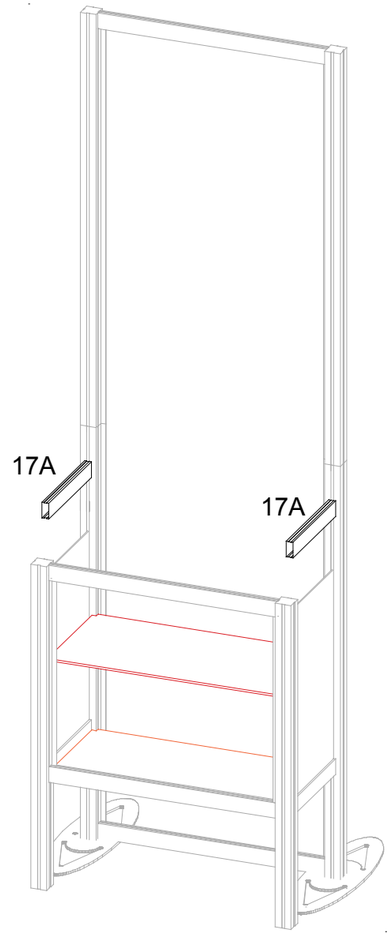


* Door Attachment


Slide pin into hinge attached to vertical. Slide door hinge over pin.

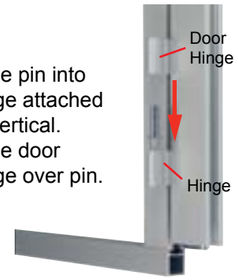


* Monitor Mount Attachment

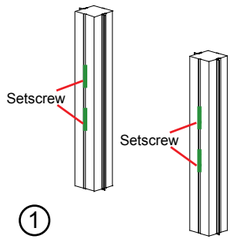


① Slide mounting connectors center into groove. Tighten setscrew to secure in place.

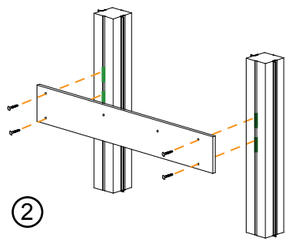

② Attach mounting plate to verticals as shown.

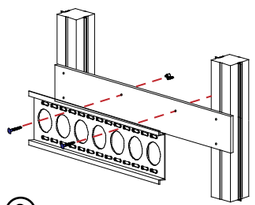

③ Then attach wall plate to plate using bolts & wing nuts

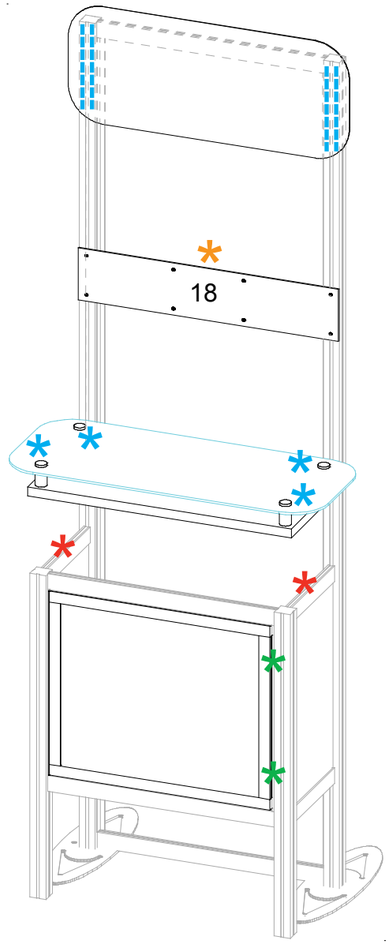


Steps:

1) Attach horizontals [16] & [16A] between verticals [14] & [15].
   NOTE: Install [16] at the base of door stop;
   Install [16A] at to top of door stop.
2) Connect horizontals [17] between verticals [14] & [15] and backwall verticals [11].
3) Insert Side Infills between verticals [14] & [15] and backwall; secure with horizontals [17A].
4) Place cabinet bottom inside assembled kiosk frame.
   NOTE: Shelf will rest on lips of horizontals [17].
5) Assemble Plex & Wood counters together.
   See Plex Counter Attachment detail.
6) Install assembled counter top to assembled kiosk base.
   See Counter Top Attachment detail.
7) Hang door on hinges located on vertical [15].
   See Door Attachment detail.
8) Attach monitor mounting plate [18] to verticals [11A] & [12A].
   See Monitor Mount Attachment detail.
9) Install header Graphic. NOTE: Will attach using Velcro


* Plex Counter Attachment

Attach stand-off barrels to primary counter top. Connect plex counter to primary counter top using screw caps.


DO NOT OVER TIGHTEN. PLEX WILL CRACK

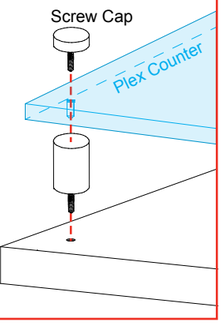

* Counter Top Attachment

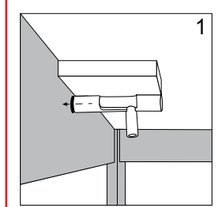

Align hole with pin

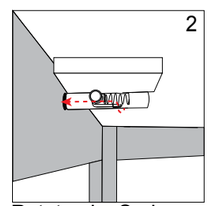


Rotate pin. Spring will push pin into hole.


Order #XXXXX - Light Installation

Steps:
1) Attach lights in desired location on top rails of backwall.
   See Light Attachment detail.

*** *Light Connection***

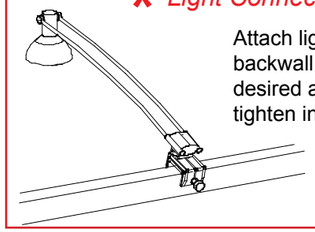

Attach lights to backwall where desired and tighten in place.

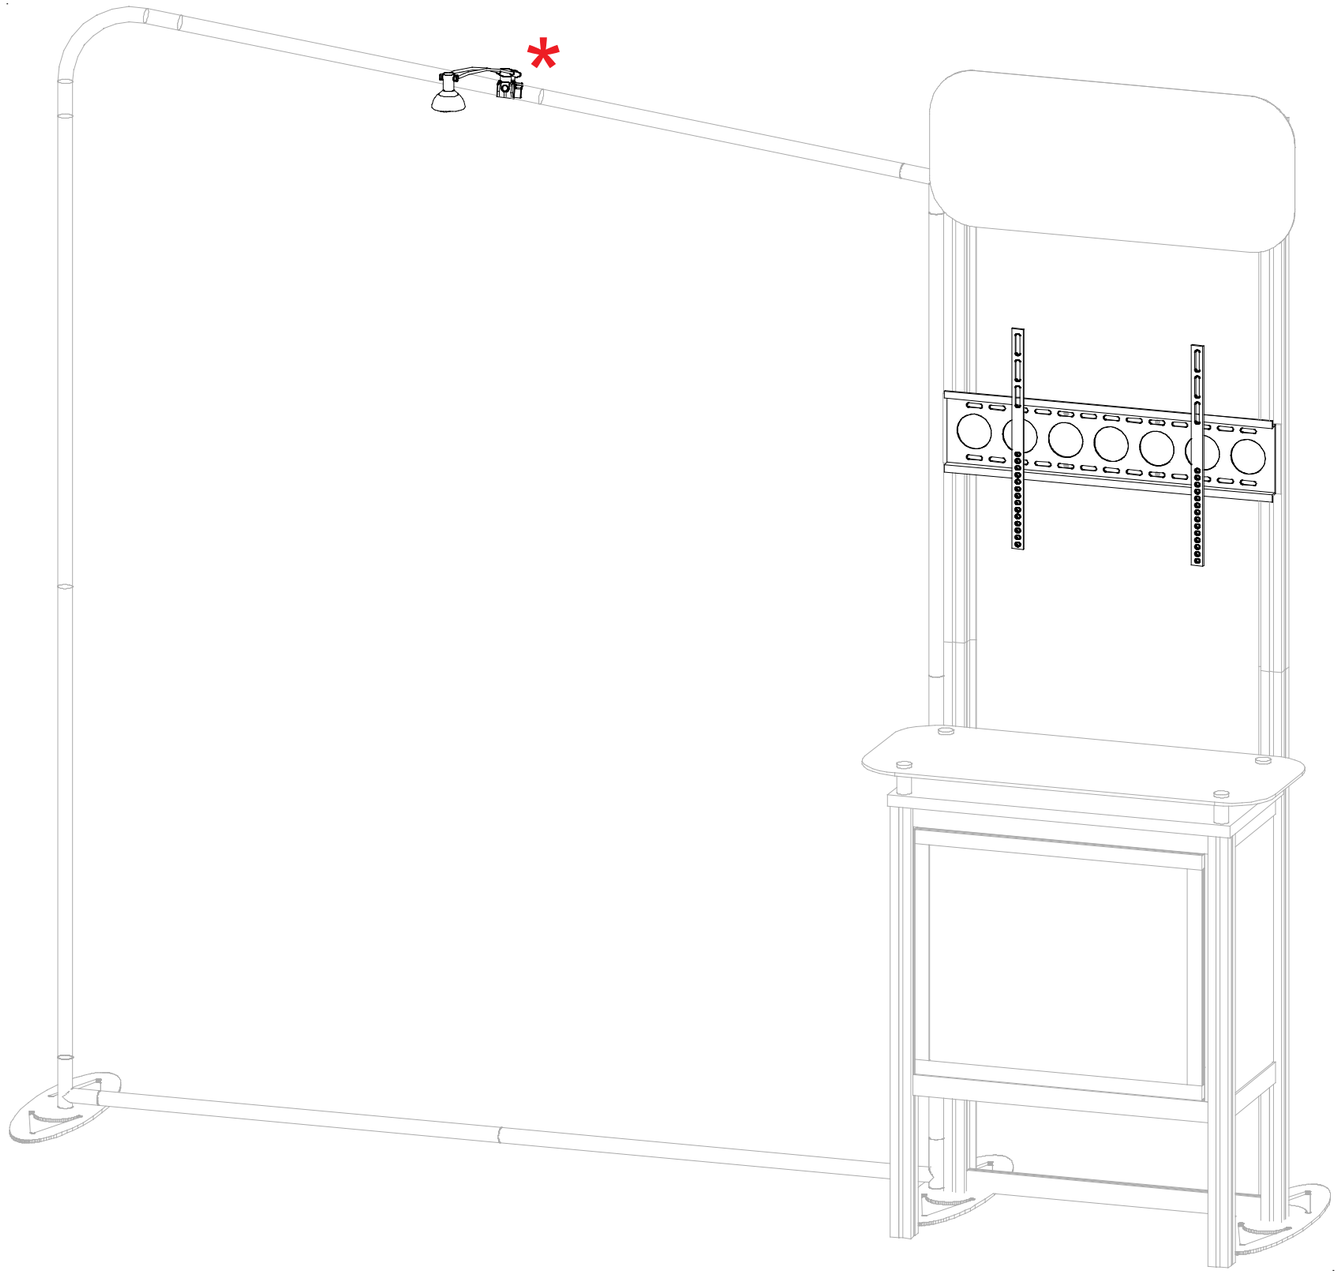



Order #XXXXX - Reception Counter Assembly


Item	Qty.	Description
1	1	38”h Vertical Extrusion w/ Door Hinges
2	1	38”h Vertical Extrusion w/ Door Stop
3	1	38”h Vertical Extrusion
4	1	38”h Vertical Extrusion
5/5A	2/2	17.5”w Horizontal Extrusion
6/6A	2/2	38”w Horizontal Extrusion
7	1	Door Stopping Extrusion

Steps:
1) Attach horizontal extursions [5] between verticals [2&3] & [1&4].
2) Connect horizontals [6] between verticals [1&2] & [3&4];
   place Cabinet Bottom self onto lip of horizontals.
3) Insert side Infills between verticals [2&3] & [1&4];
   insert front Infill between verticals [3&4].
4) Hang Assembled Cabinet Door. See Door Attachment detail.
5) Attach horizontal extrusions [5A] between verticals [2&3] & [1&4].
6) Connect horizontals [6A] between verticals [3&4];
   place Cabinet Top onto lip of horizontals.
7) Screw threaded end of Stand-off Barrels into the tops of verticals.
8) Place Upper Plex Counter on top of installed barrels;
   secure with screw caps. See Upper Plex Counter Attachment detail.

When Assembled

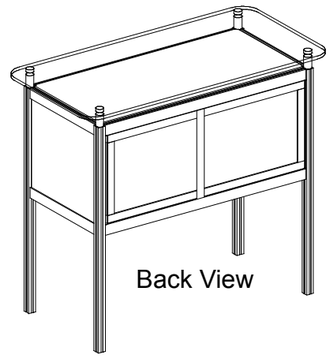

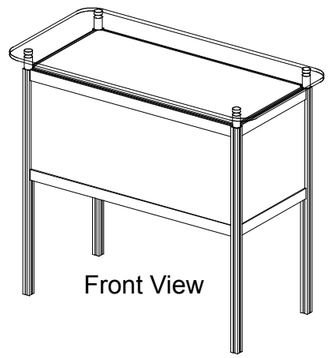

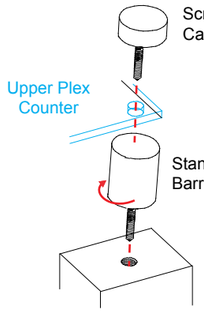

Upper Plex Counter Attachment


1) Attach standoff barrels to counter and secure in place.


2) Secure Upper Plex Counter to standoffs using screw caps.


Door Attachment


Slide pin into hinge attached to vertical. Slide door hinge over pin.



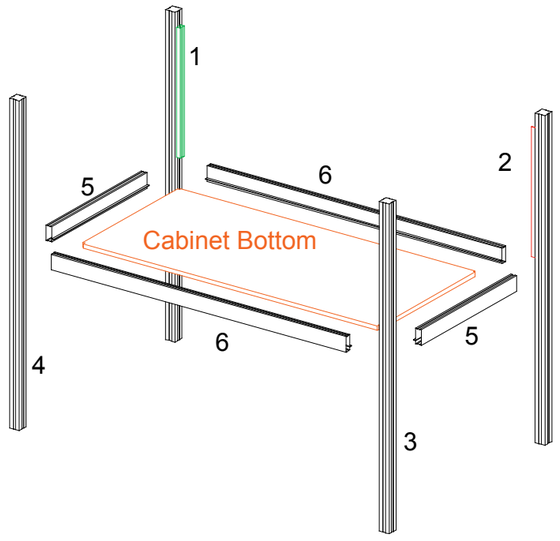


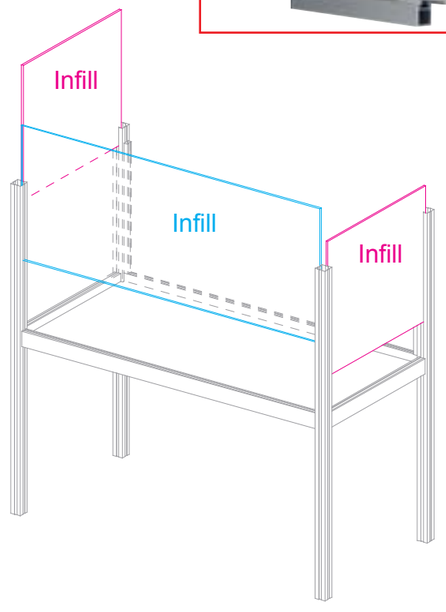


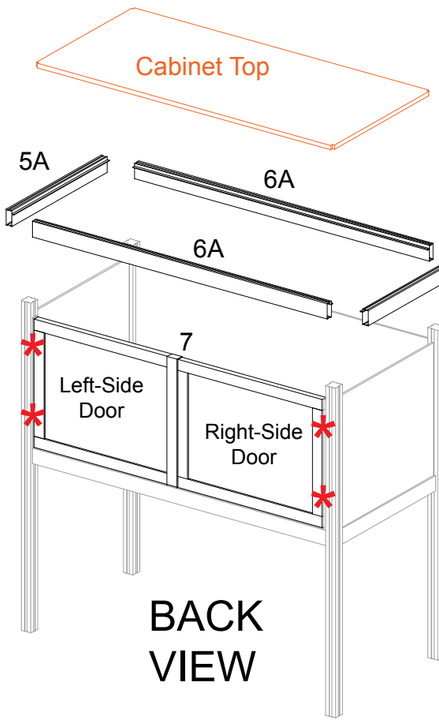


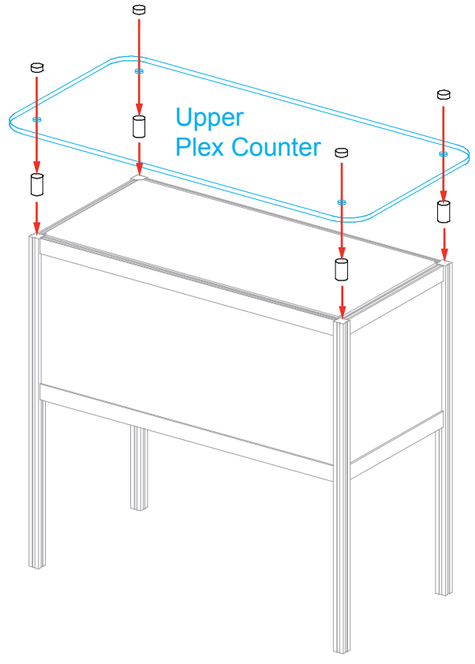


Steps:
1) Attach base [1] to post using bolt.
2) Attach square plates [4] to curved vertical using bolts.
   NOTE: Square plate [4] must rotate to left and right before installing clamshell.
3) Attach clamshells [5] to square plates [4] using hex nuts.
4) Insert iPad and feed wire through holes as shown in detail.

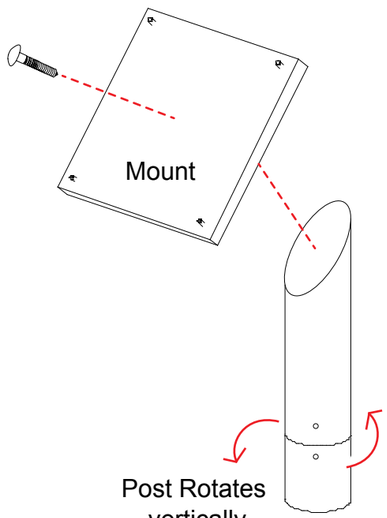

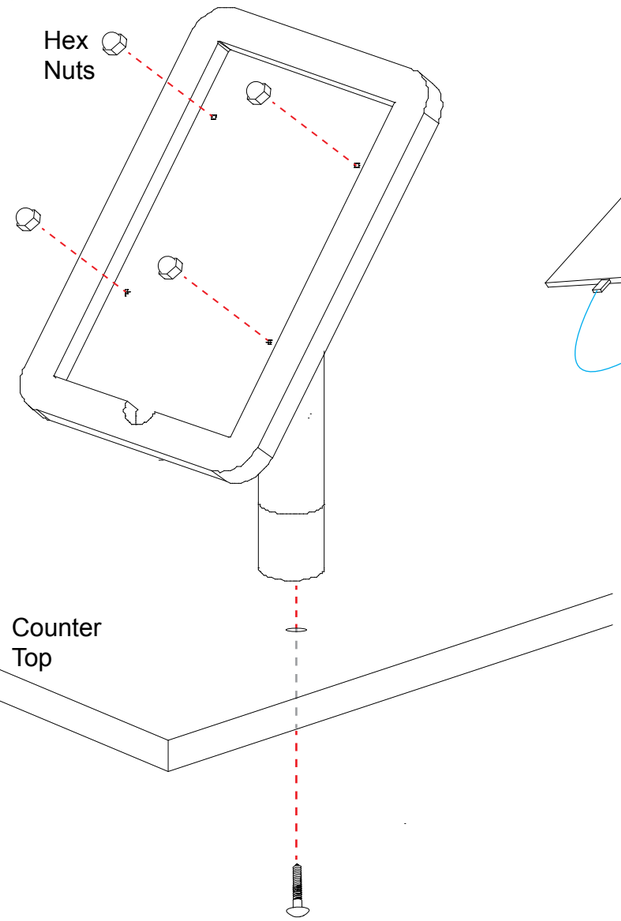

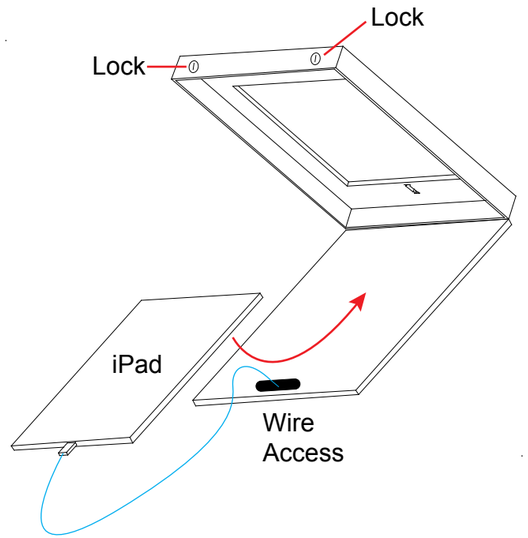


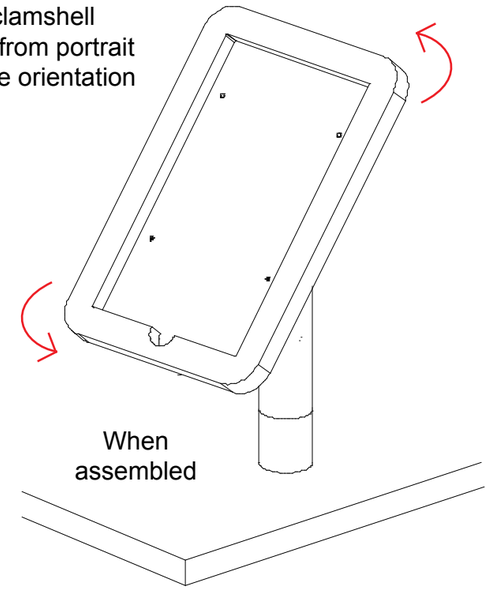

Clamshell Attachment



Optional Cover for Home Button

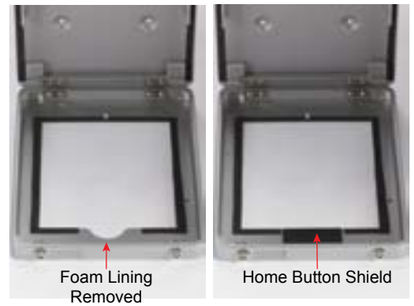

1) Remove foam lining from inside bottom of clamshell as shown.
2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.

NOTE: This is a permanent fix and can't be easily removed.