



Clickline


Step 1. Unfold verticals.

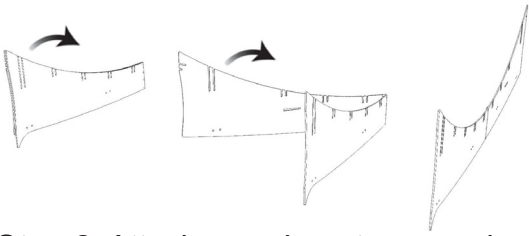


Step 2. Attach crossbars to second vertical securing with stand-off caps; attach third vertical to crossbars securing with stand-off caps.

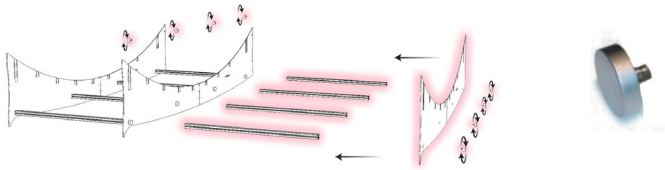


Step 4. Tip canopy upright.

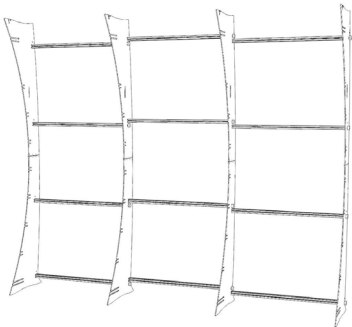


Step 6. Slide in tops; and OPTIONAL bottoms.
Note panels must alternate slots

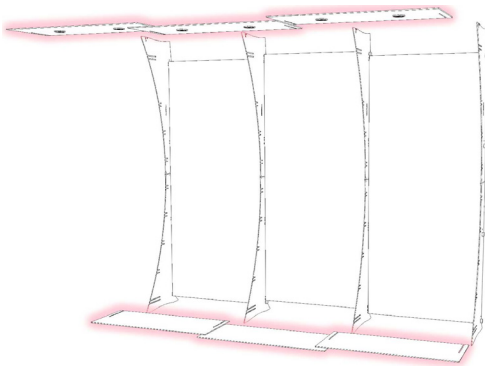


Step 2. Attach crossbars to first vertical securing with stand-off caps; attach second vertical to crossbars securing with stand-off caps.

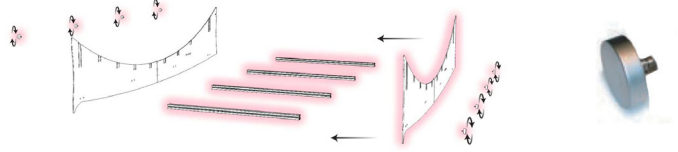


Step 3. Attach crossbars to third vertical securing with stand-off caps; attach fourth vertical to crossbars securing with stand-off caps.

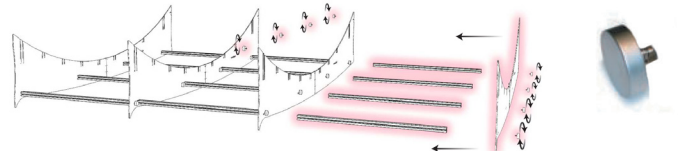

Step 5. Attach graphics; stretch graphic over top and under bottom crossbars secure using velcro strips.

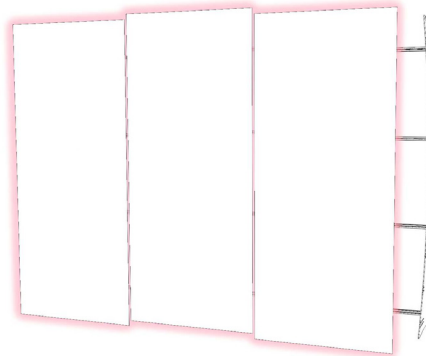

Step 7. Attach accessories (Shelves, Monitor Mount)

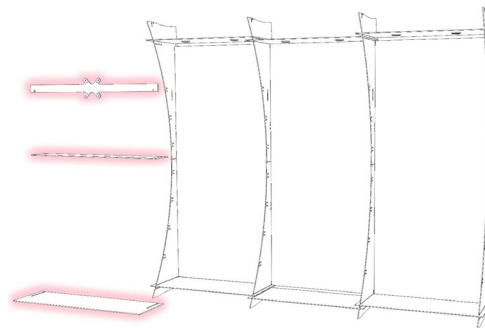

Complete

