


Parts List

- A.) x6 - Bottom Columns
- B.) x6 - Top Columns
- C.) x2 - 2-piece L=67 1/4" Middle Crossbars
- D.) x4 - L=53 1/2" Crossbars


- E.) x4 - L=19 1/2" Crossbars
- F.) x6 - Bases
- G.) x1 - Canopy
- H.) x4 - Stem Lights

- I.) x8 - Outside Shelves
- J.) x24 - Shelf Supports
- K.) x8 - Middle Shelves
- L.) x1 - Header


Step 1. Attach bottom columns to bases; assemble 2-piece crossbar; attach bottom crossbars to columns.

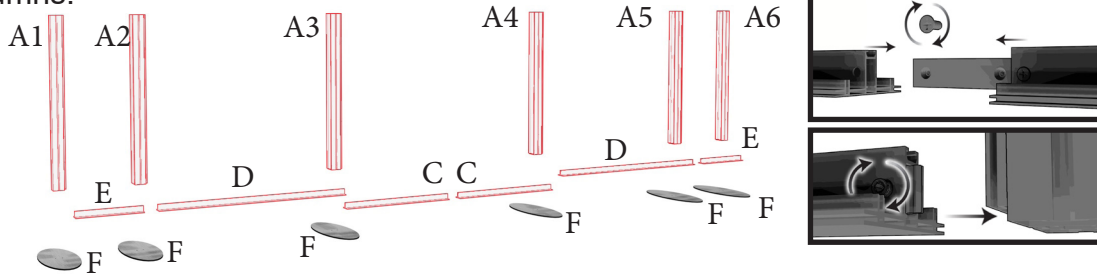


Step 2. Attach top columns to bottom columns.

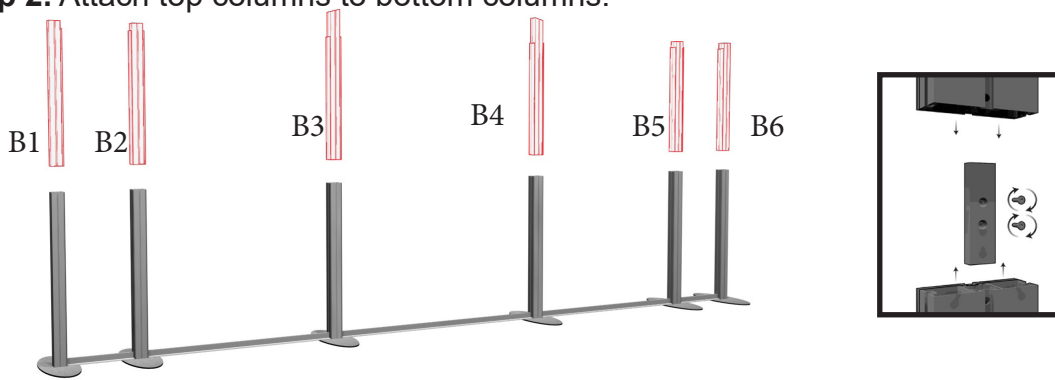


Step 3. Assemble 2-piece crossbar; attach top crossbars to columns.

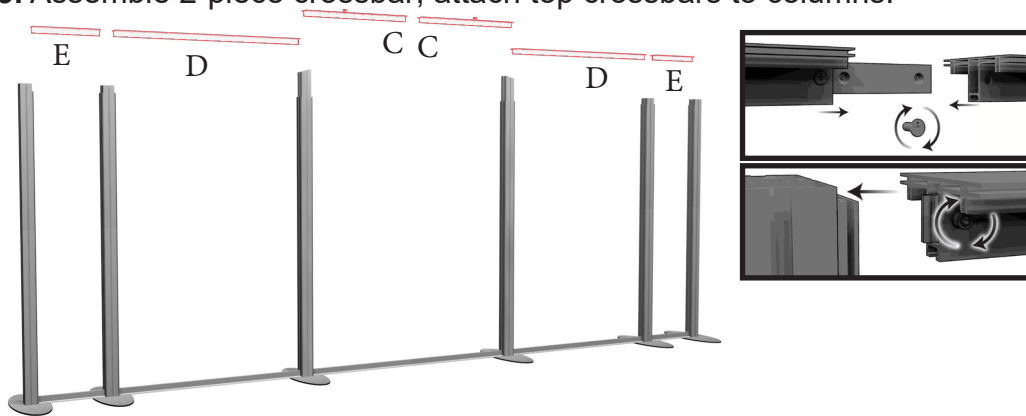


Step 4. Assemble canopy; attach to middle columns.

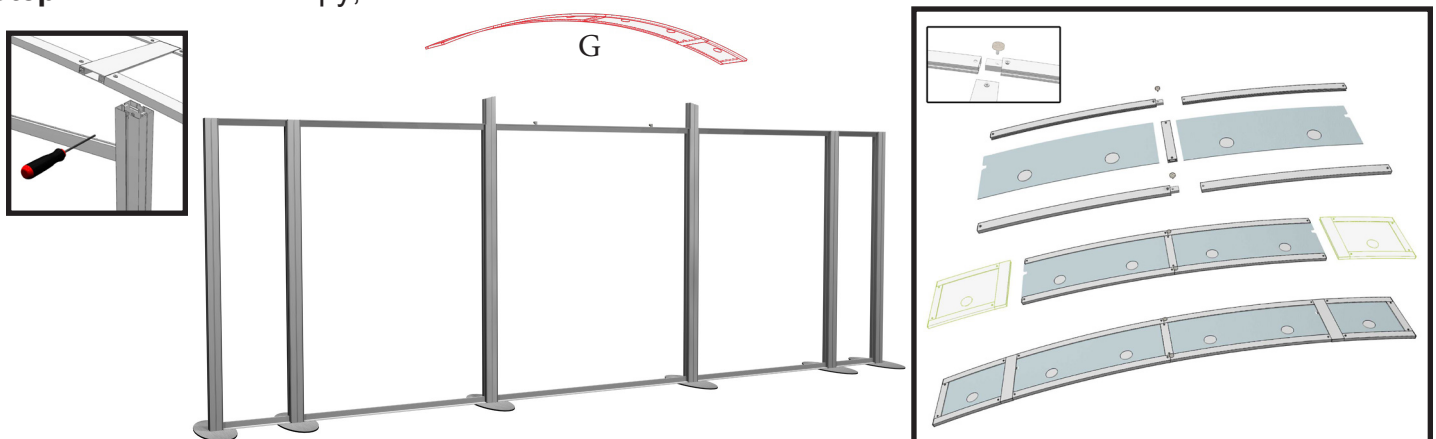

Step 5. Attach graphics.

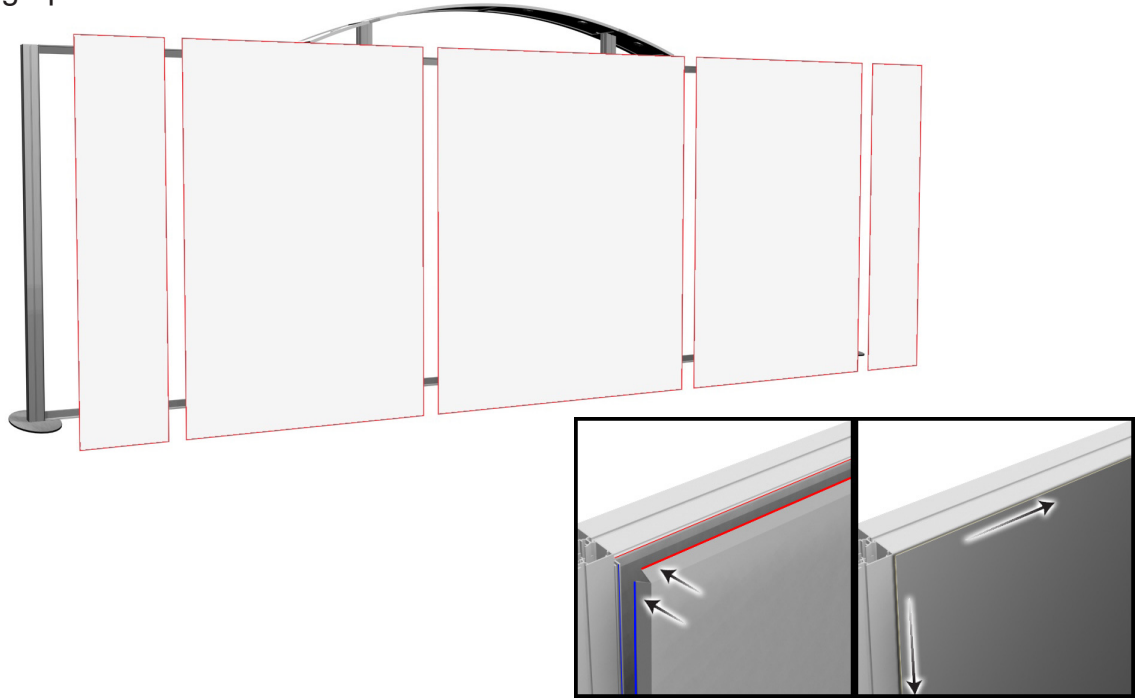

Step 5. Attach shelf supports to columns; attach shelves; attach stem lights; attach header.

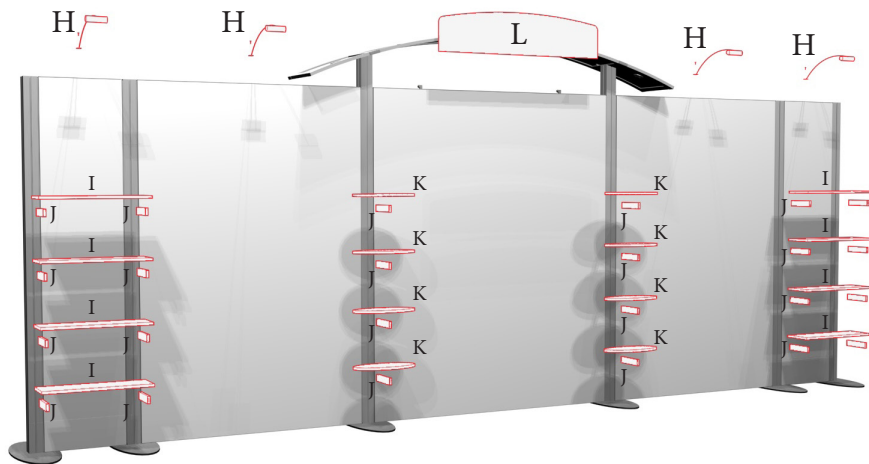

COMPLETE



Parts List



A.) x5 - L=40 1/4" Columns

B.) x12 - L=46" Crossbars

C.) x8 - Panels.


Step 1. Attach bottom crossbars to columns.

Step 2. Slide in panels. Attach middle crossbars to columns.

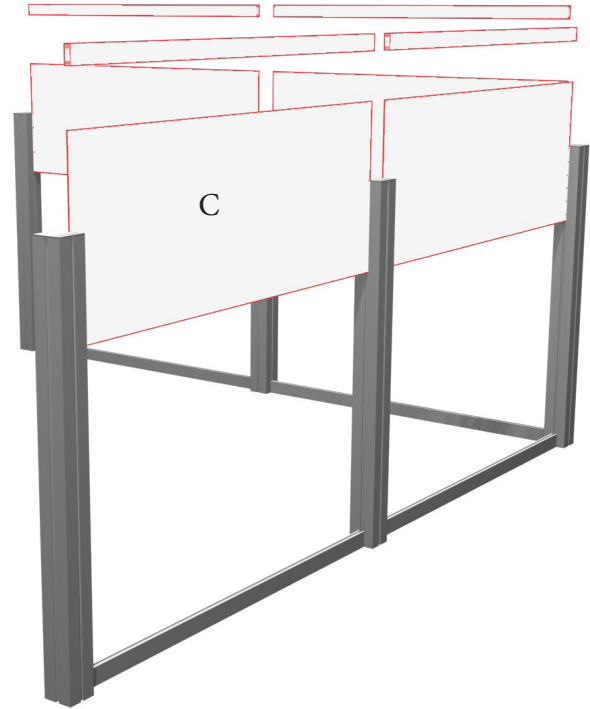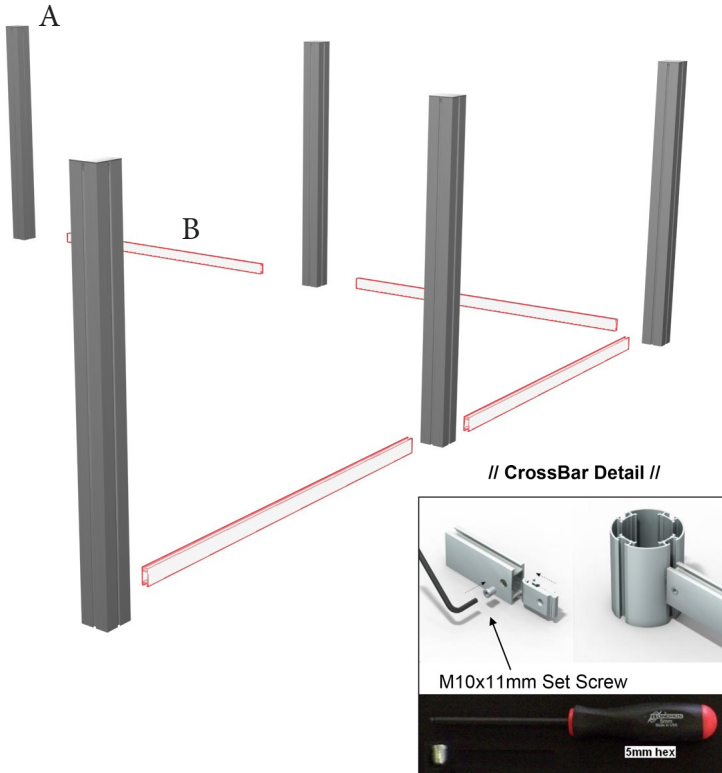


Step 3. Slide in panels. Attach top crossbars to columns.

COMPLETE

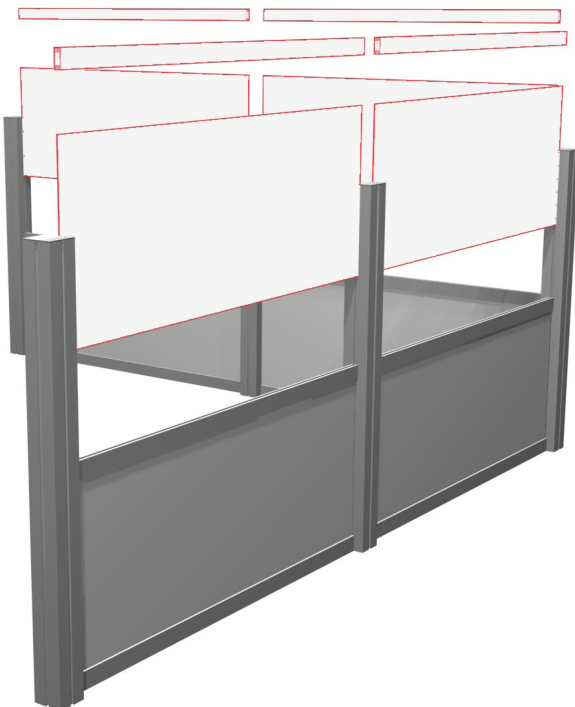


Xrline


Step 1. Attach clip; slide light into channel.

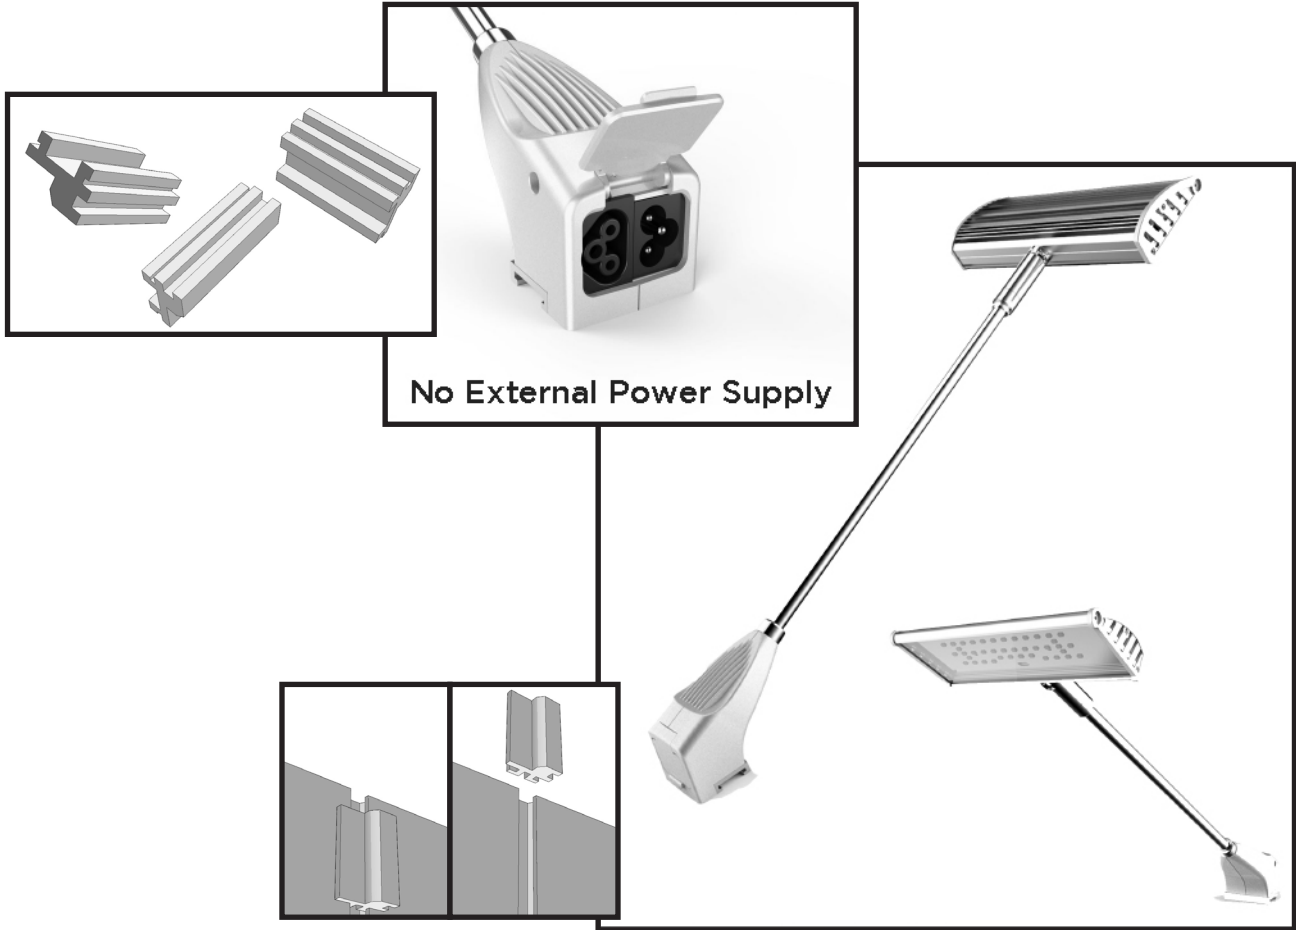

Step 2. Connect light to light.

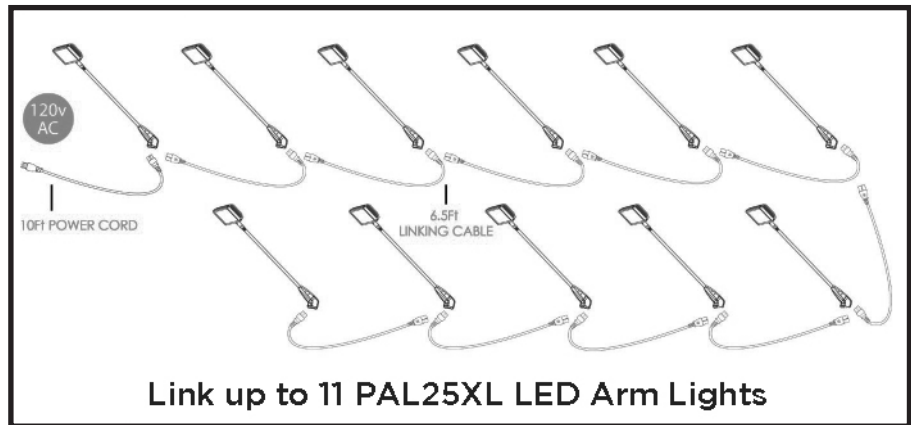


Parts List

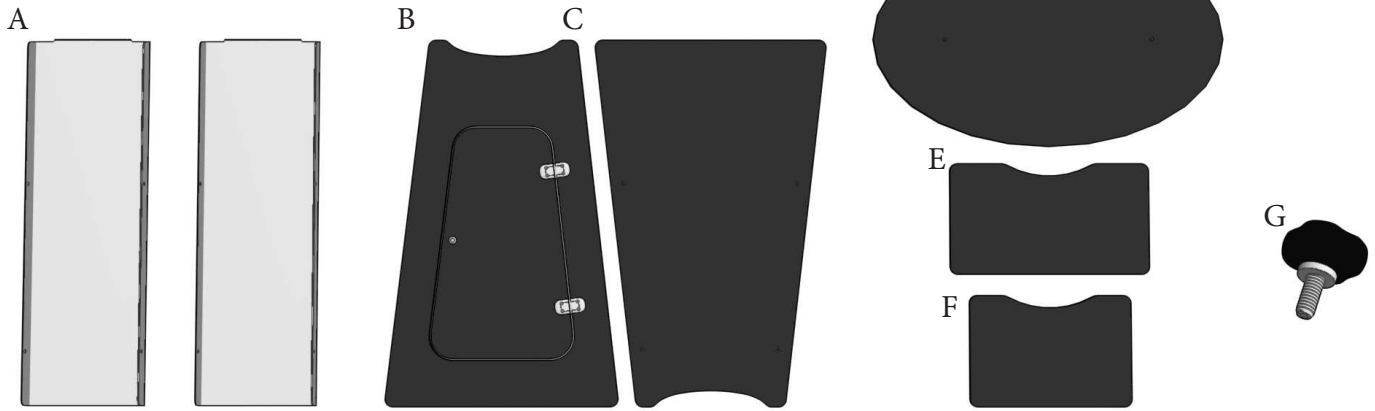

Step 1. Lay back(B) down attach left&right(A) dibond side using x2 Short Knobs(G) each.

Step 2. Tilt cabinet up; open door; attach front(C) to dibond sides using x4 Short knobs(G).

Step 3. Drop shelves(E&F) onto knobs.

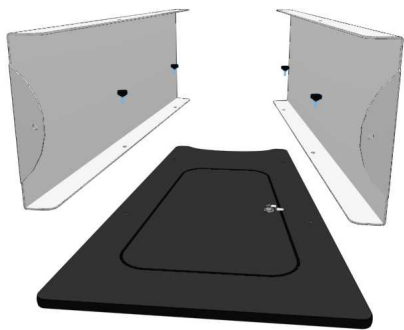

Step 4. With door open attach top(D) to dibond using x2 Short Knobs(G).

Complete

