


### Step 1. Attach base to column.



1/4"-20 x 1" long Flat Head Screw  
(tighten w/ Philips screw driver)

### Step 2. Attach arms to column.

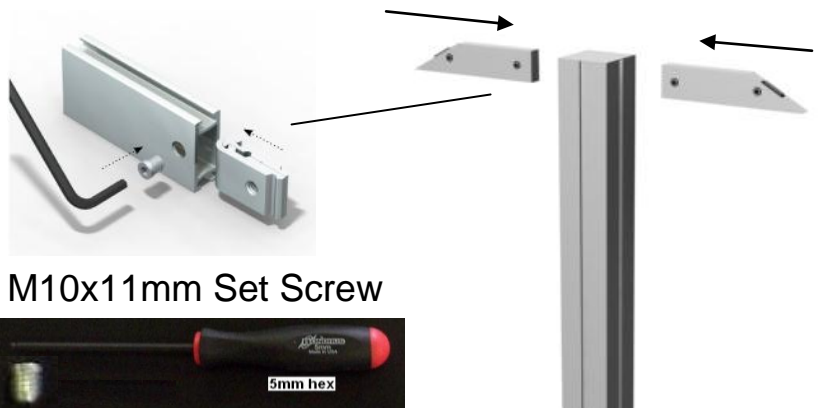

M10x11mm Set Screw

### Step 3. Attach mounts to arms.



M10x11mm Set Screw